



# Materials Technology

## Gurley Airflow Testing


**CONFORMS TO QATM 218/219.**

### **LOW FLOWING MEDIA**

A Gurley Number is the time in seconds it takes for 100 cc of air to pass through one-square inch of membrane when a constant pressure of 4.88 inches of water is applied.

**Standard test used to measure airflow of low flowing media.**

### **APPARATUS FOR GURLEY AIRFLOW TESTING**

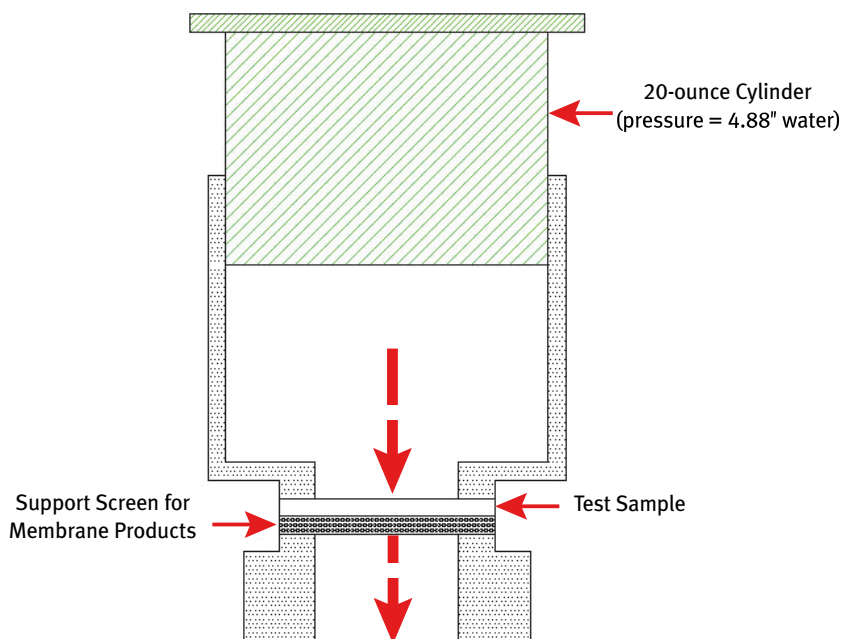

W. L. GORE & ASSOCIATES, INC.  
401 Airport Road • Elkton, MD 21921 • USA  
Phone: 1.410.392.4440 • Toll-Free: 1.800.455.4670  
Fax: 410.506.7993

**gore.com**

**FOR INDUSTRIAL USE ONLY.** Not for use in food, drug, cosmetic or medical device manufacturing, processing, or packaging operations.

GORE and design are trademarks of W. L. Gore & Associates. All rights reserved.  
© 2011 W. L. Gore & Associates, Inc. Printed in USA.

