




Impact of Materials on Microwave Cable Performance

White Paper

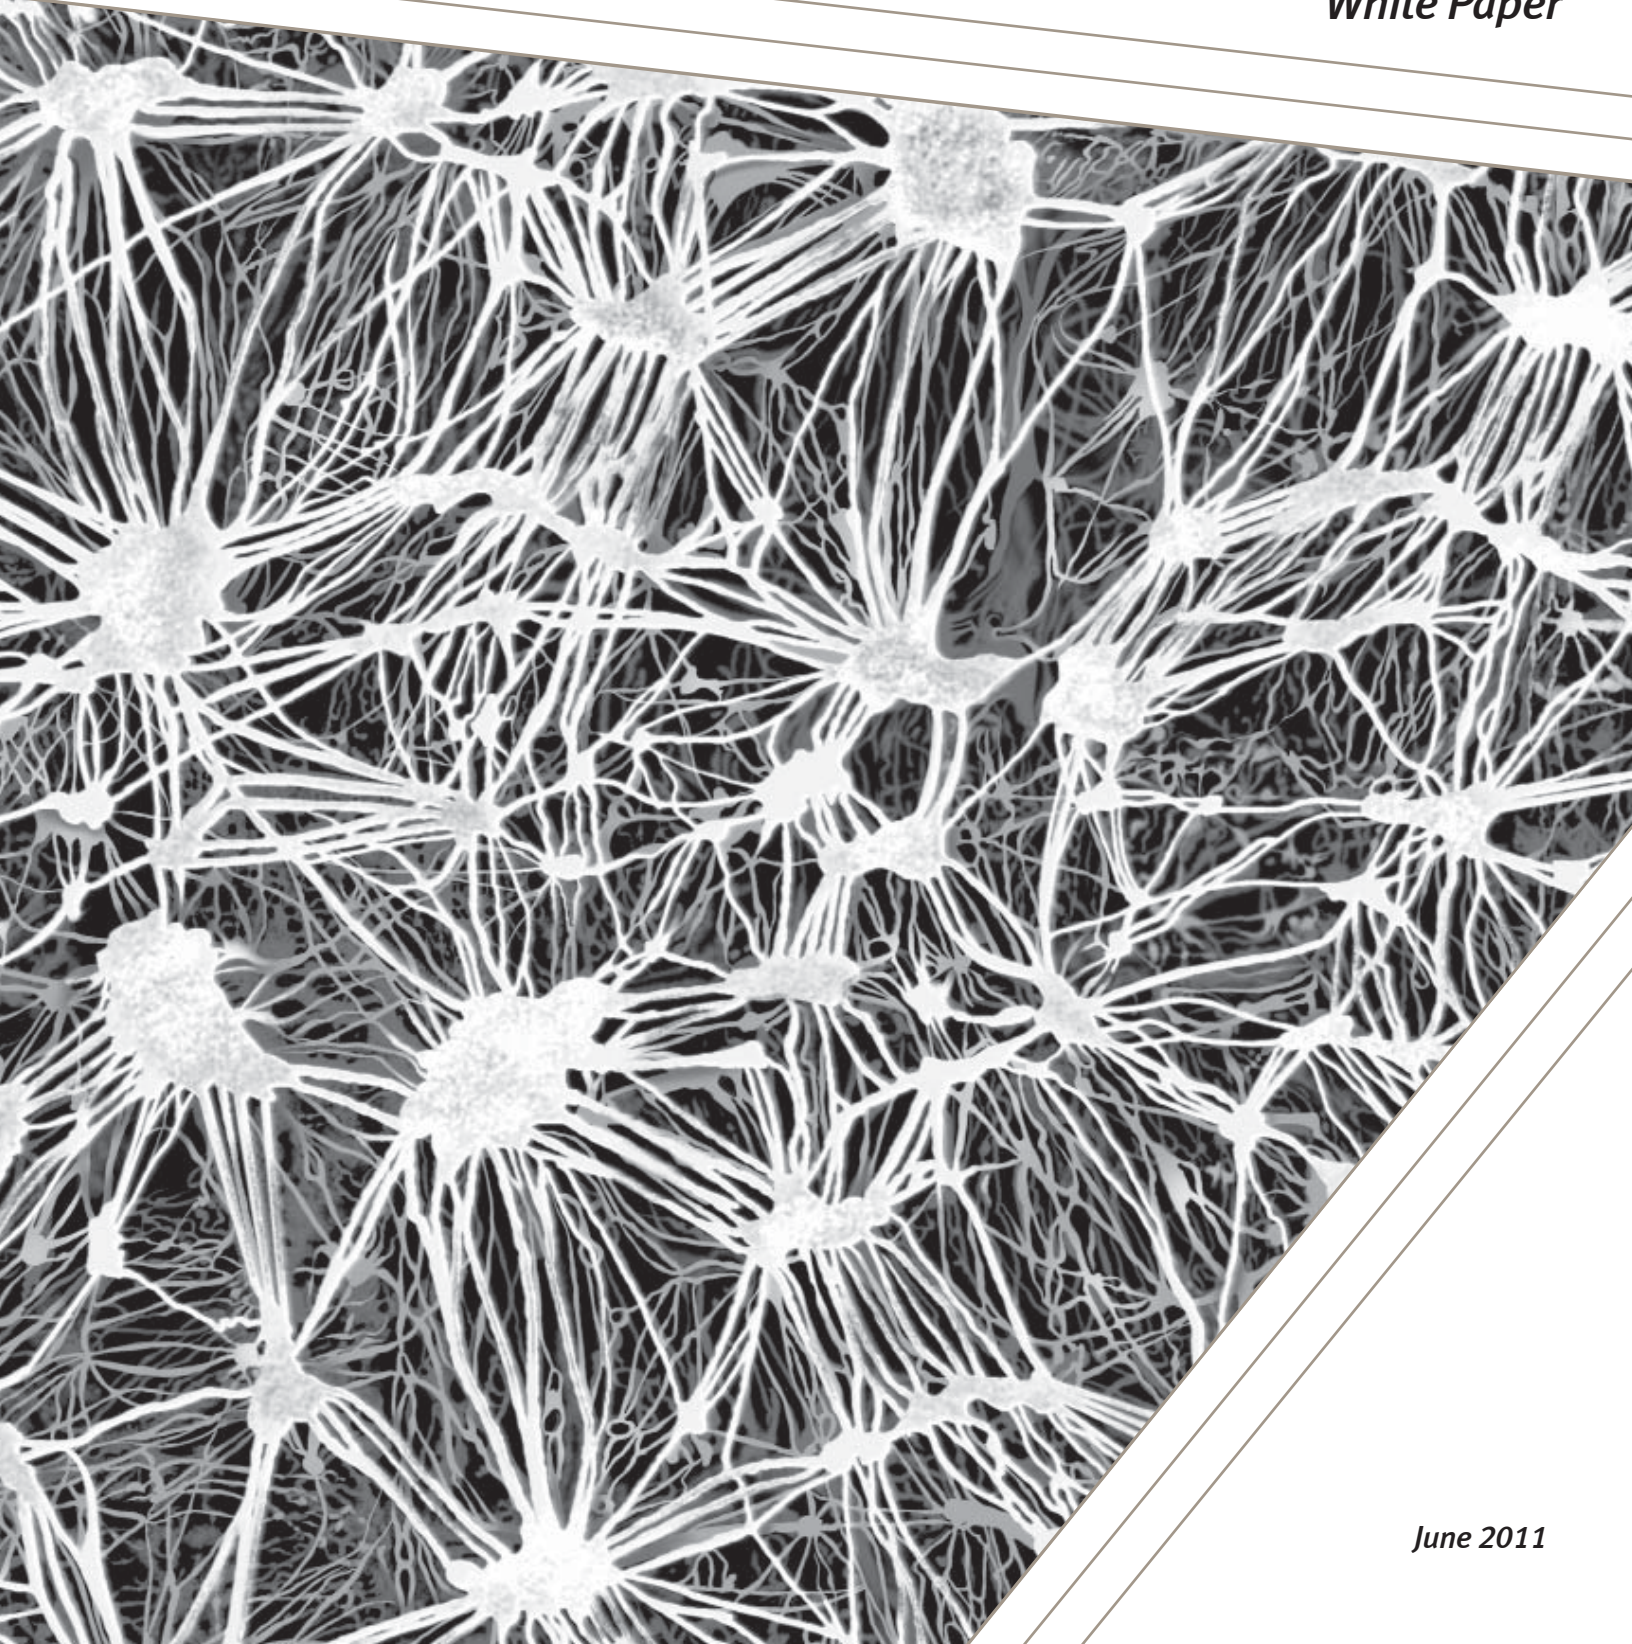

June 2011



Abstract:

Cables are often the last component considered during system designs. In many situations, cables are really the system's lifeline. For example, if the cable system used for data transmission in a spacecraft fails, the communication between the craft and the ground station could be lost. Cable reliability is based on both durability and signal integrity, and the materials used to engineer the assemblies have a direct impact on their life in any environment.

Impact of Materials on Microwave Cable Performance

Paul Pino, Application Engineer

Contents

Page Number	Topic
3	Introduction
3	Identifying Constraints
4	Choosing the Right Materials
7	Verifying the Design

Impact of Materials on Microwave Cable Performance

Introduction

The environments in which microwave cable assemblies are being used today are becoming more challenging with exposure to such conditions as extreme temperatures, chemicals, abrasion, and flexing. Additional challenges include the need for smaller, lighter packaging for cable systems that last longer and cost less. To ensure signal integrity and product reliability, it is essential to identify the electrical, mechanical, environmental, and application-specific constraints that can affect the cable's overall performance. These variables have a direct impact on the materials used for cable dielectric and jacketing as well as the construction of the cable. Also, testing and data analysis are key to ensuring that the cable will, in fact, perform reliably in a specific environment.

Identifying Constraints

Environmental influences are having more of an impact on microwave/RF cable assemblies. Electrical performance is probably the first and foremost consideration, and many factors can potentially compromise signal integrity, such as internal and external electromagnetic interference (EMI), voltage standing wave ratio (VSWR), and insertion loss. Electrical performance is typically very reliable when no other environmental factors are involved; however, when mechanical, environmental, or application-specific stress is added, maintaining reliable electrical performance can be more challenging.

Mechanical stress occurs when cables are exposed to various types of movement. Flexing creates kinetic energy in the cable, which can cause severe damage if not properly managed. One of the biggest causes of mechanical stress on cables is when the cable is part of equipment handled by a person. An operator can kink, pinch, or crush a cable by stepping on it or rolling over it. Therefore, crush and tensile strength is essential in overcoming mechanical stress. Also, cables used with portable equipment can come into contact with sharp surfaces that cut cables or expose them to abrasion. When the complexities of compensating for vibration or gravity are added, mechanical stress can significantly compromise stability and cause premature failure of a cable.

Environmental stress results from the physical area in which the cables are used. Extreme temperatures and pressures affect cable materials. Low temperatures make them brittle, and high temperatures cause them to become very soft. Vacuum leaches oils and additives out of a cable, contaminating a cleanroom manufacturing process, while hydrostatic pressure causes gas or liquids to permeate cable jackets. Radiation can damage both dielectric and jacket materials depending on the type and dosage level. Friction resulting from cable movement can compromise cable jackets by causing particulation, while contaminants such as mud, chemicals, or metal chips can damage the cable jacket. Environmental stress can significantly compromise dielectric and jacketing materials, so these issues must be taken into account when designing a cable assembly.

Application-specific stress results from constraints that are unique to the application in which the cable will be used. In aerospace applications, cables need to be the lightest and smallest possible size in order to minimize mass during take-off. If the cables are used by technicians or other personnel, safety issues such as flammability, voltage, and halogen use are factors.

Choosing the Right Materials

One of the added complexities of designing cable assemblies is that electrical, mechanical, and environmental performance is interwoven. Each has a direct impact on the other; so the design must be thoroughly tested in the specific application.

Ensuring high-quality signal stability means evaluating the dielectric and jacket materials for attributes that account for the harsh elements of the application. The dielectric materials used in signaling cables affect the signal integrity as well as robustness of the cable. The material used in an outer jacket affects maximum voltage and resistance to abrasion. Jacket materials must survive most of the external factors (e.g., temperature, friction, liquids, and gases) to protect the conductors inside the cable. The list of possible materials used in cable dielectric and jacketing is very long, and many of these have been developed for specific applications. Because each material has unique properties, some are more appropriate than others for use in microwave cables engineered for challenging environments.

Silicone

Silicone is primarily used as a cable jacket and is very flexible even at low temperatures, Table 1. However, it cuts easily, and its sticky surface results in a high coefficient of friction, so it is not good for cleanroom environments. Silicone's tensile strength and tear resistance are low, therefore requiring it to be thicker as compared to other jacket materials. Some surface treatments are available to reduce the coefficient of friction, but these tend to wear off over time. Silicone has very good radiation resistance, but the grades of silicone used for cable jackets are known to outgas silicone oil in vacuum applications such as a thermal vacuum chamber. If weight is an issue, silicone is not the optimal choice.

If flexibility is important and weight is not a factor, silicone is a good choice. However, it is more labor-intensive to gain access to the conductors, which results in higher costs for termination.

Table 1: Properties of Silicone

	Advantages	Disadvantages
Electrical		Dielectric constant
Mechanical	Flexible at low temperatures	Low cut-through resistance High coefficient of friction High specific gravity
Environmental	Radiation resistance to 10 ⁸ RADs	Outgases silicone oil Low resistance to oil Tacky texture
Application-Specific	Low-profile packaging	Weight Thick insulation needed, leading to large outer diameter

Polyurethane

Polyurethane is a good jacket material, but it is not used as a dielectric material because its dielectric withstanding voltage is low when compared to other materials, Table 2. Halogen-free grades are available. Mechanically, polyurethane is flexible, and it is very resistant to cut-through and abrasion. Treatment for flame resistance does not reduce its flexibility; however, the

more flexible grades tend to be sticky or tacky, which results in a higher coefficient of friction. Environmentally, polyurethane is resistant to solvents, UV rays, radiation, and fungus. Polyurethane does not have a very broad temperature range; it becomes brittle around -40°C, and its upper temperature limit is around 100°C. Also, polyurethane cannot survive the chemicals used for cleaning.

Table 2: Properties of Polyurethane

	Advantages	Disadvantages
Electrical	Overall electrical performance	Dielectric withstanding voltage
Mechanical	Cut-through resistance Abrasion resistance Flexibility Flame treatment doesn't reduce flexibility	Tacky in high-flexibility grades
Environmental	Solvent resistance UV resistance Radiation resistance Fungus resistance Halogen-free	Temperature resistance Contaminant resistance
Application-Specific	Primarily used for jacketing	

Polyethylene

Polyethylene is most appropriate as a dielectric for conductors because polyethylene jackets tend to be stiff, which affects the flexibility of the cable, Table 3. Polyethylene has good dielectric constant properties when used in conjunction with foam. Mechanically, high molecular-weight polyethylene is abrasion-resistant and low-friction, but it is also stiff when compared to other materials. Like polyurethane, polyethylene's temperature range is rather limited, and it is difficult to bond chemical boots to polyethylene cable jackets. Overall the mechanical properties of polyethylene are reduced by flame-retardant treatments.

Table 3: Properties of Polyethylene

	Advantages	Disadvantages
Electrical	Dielectric constant	
Mechanical	Abrasion resistance Wide range of grades	Stiff in abrasion-resistant grades
Environmental	Chemical resistance Coefficient of friction Radiation resistance	Temperature resistance Adhesion Flame retardance
Application-Specific	Used for conductors and jacketing	Flexibility

Fluoropolymers

Fluoropolymers such as fluorinated ethylene propylene (FEP), perfluoroalkoxy (PFA), and polytetrafluoroethylene (PTFE) are excellent jacket materials particularly in applications when the cost of system failure is high, Table 4. The dielectric withstanding voltage of fluoropolymers is among the highest of any dielectric material. Fluoropolymers can withstand extreme temperatures, but each material has its own range: FEP can handle temperatures ranging from -250°C to 150°C, while PFA ranges from -250°C to 200°C. PTFE is suitable for temperatures from cryogenic to 260°C without losing flexibility. Fluoropolymers can also withstand exposure to chemicals, acids, and

aggressive solvents, and they are naturally non-flammable. PTFE and its co-polymers also have the benefit of low outgassing, which is critical for ultra-high vacuum (UHV) environments. Most fluoropolymers are flexible; but like temperature resistance, flexibility varies depending on the specific material. PFA is the stiffest followed by FEP and PTFE, and engineered PTFE is the most flexible. Anything that is added to a cable's dielectric, jacket, conductors, or shield wires will outgas in a vacuum. When materials outgas, particulate matter condenses on cooler surfaces, which are typically the work surfaces in the application area. In a satellite, optics can become fogged by silicone oil or other processing lubricants that outgas from a cable. PTFE is chemically inert and does not contain any process additives, oils, lubricants, or plasticizers, which makes it the best material for vacuum environments.

Table 4: Properties of Fluoropolymers

	Advantages	Disadvantages
Electrical	Dielectric constant	
Mechanical	Flexibility Tensile strength	Abrasion and cut-through resistance
Environmental	Liquid and gas resistance Temperature resistance UV resistance No outgassing Coefficient of friction	Radiation resistance
Application-Specific	Used as dielectric and jacketing Flame resistance Performance standards	Additional processing required

Engineered Fluoropolymers

One of the few negatives of fluoropolymers is that they are not very resistant to abrasion and cut-through. Certain fluoropolymers can be engineered to enhance their physical, chemical, and electromagnetic attributes, which improves a cable's ability to withstand the specific challenges of a microwave application. Ethylene tetrafluoroethylene (ETFE) can be irradiated to improve its mechanical properties and chemical resistance; however, irradiation increases stiffness, so there is a significant decrease in flexibility. PTFE is naturally thermal-resistant and chemically inert, so its temperature and chemical properties are not altered when engineered to enhance electrical or mechanical attributes.

Specialized technologies have been developed to engineer PTFE so that it can withstand a wide variety of environmental and mechanical challenges, Table 5. The dielectric materials used to insulate conductors can significantly affect insertion loss, cable size, and flexibility. The lower the dielectric loss, the less insertion loss the cable exhibits. Typical fluoropolymers have a dielectric loss of 2.1. To reduce cable size, PTFE can be engineered to have a dielectric constant of 1.3. At the same time, its dielectric withstanding voltage can be increased by a factor of 2.5 while achieving a very low loss tangent of 0.00015 at 10 GHz compared to PTFE's standard construction. With these attributes, a conductor insulated with a 1/2000th-inch (50-micron) layer of engineered PTFE can be rated for use at 1,000 volts. Another version of engineered PTFE can be made semiconductive and used to increase the

effectiveness of a cable’s shield. For issues of abrasion or cut-through resistance, PTFE has been engineered to attain a tensile strength that is 50 times greater than standard PTFE and to withstand temperatures from cryogenic to 300°C.

Table 5: Enhanced Properties of Engineered Fluoropolymers

	Properties
Electrical	Dielectric constant
Mechanical	Flexibility Tensile strength
Environmental	Temperature and UV resistance Chemical resistance Coefficient of friction Outgassing
Application-Specific	Liquid and gas resistance Weight and size

Verifying the Design

Some industries have defined safety, environmental, and performance-related standards for cables, but many rugged applications that use microwave cables require going beyond the standards. In these kinds of situations, the manufacturer may need to develop additional tests that evaluate the cable’s electrical performance while simulating mechanical and environmental stress similar to that in the application. It is essential to monitor electrical performance and signal integrity throughout all of the testing, and the specific type of testing that is needed depends on the environmental constraints of the application.

Phased-array applications require close phase tracking of multiple assemblies of the same type and length to minimize residual systemic error. These errors eventually affect system range, clutter and jamming resistance, and overall accuracy. Problems with phase tracking most often occur either because of poor materials and process control during cable assembly manufacturing or because assemblies from different manufacturers’ components were combined. So phase tracking and stability should be thoroughly tested in the environment in which the cables will be used.

Mechanical testing verifies electrical performance while the cable is operating in environmental conditions such as crushing, abrasion, potential cut-through, tight bending, continuous flexing, shock, and vibration. Using microwave/RF cables generally means that the application requires excellent phase stability, which can be affected with bending and flexure, whether during installation, routine maintenance, or actual use. Random flexing is a frequent issue with a handheld test instrument because the cable assembly is often wrapped around the instrument to carry it. The impact of these movements on system performance must be evaluated during system design. In the lab environment, a technician could roll over the cable with a chair, which means that crush strength is also an issue. Random flexing motion is very difficult to model in a test lab, but the worst-case scenario can be modeled using a tic-toc test with repeated bending of 180° or more. Then a pull test can simulate a cable being used as a tether. During these tests insertion loss and VSWR should be evaluated.

The cable's electrical performance should also be measured while simulating the environmental conditions in which it will operate — conditions such as temperature, altitude, and pressure extremes; vibration and acceleration; exposure to liquids or gas; or humidity. It is important to monitor impedance during altitude change, mechanical shock, and vibration tests. Vibration and shock can cause mechanical and electrical failure due to metal fatigue or cracking of solder joints. Temperature changes have a direct impact on phase length. As the temperature approaches an extreme, the electrical length will change; if it does not change at the same rate as the temperature when returning to normal (a state known as hysteresis), it is very difficult to apply error-correction techniques to the signal. Adding a clamp force during a temperature cycling test allows monitoring of the cable's dielectric withstanding voltage to see how the jacket and conductor change.

After the cable is put through substantive mechanical and environmental tests, the manufacturer should again verify that the electrical performance, dielectric, and jacket materials remain stable within the requirements of the application.

For products that will be used in demanding environments, the consequences of cable failure are usually high. Therefore it is essential to ensure the electrical and mechanical integrity of the cable for the life of the application. To do this means understanding the factors that can compromise cable performance; selecting the right materials to address these factors; and verifying the cable's reliability through electrical, mechanical, and environmental testing.



Impact of Materials on Microwave Cable Performance

Worldwide Sales and Support

Contact Information

China: Beijing

+86 10 6408 8060

China: Shanghai

+86 21 5172 8299

China: Shenzhen

+86 755 8359 8262

Germany

+49 9144 6010

India

+65 6 733 2882

International

+1 302 292 5100

Japan

+81 3 6746 2582

Korea

+82 2 393 3411

North America

1 800 445 4673

Singapore and ASEAN

+65 6 733 2882

Taiwan

+886 2 8771 7799

United Kingdom

+44 1382 561511

GORE and designs are trademarks of W. L. Gore & Associates, Inc. © Copyright March 24, 2011, W. L. Gore & Associates, Inc. All rights reserved.

W. L. Gore & Associates, Inc.
380 Starr Road, Landenberg, PA 19350
1 (800) 445-GORE (4673)
www.gore.com

