



GORE® Filtration Products

METALS INDUSTRY

Case history

GORE® LOW DRAG™ Filter Bags: Silicomanganese Ferroalloy Production, Emalahleni, South Africa

CHALLENGE

Transalloys (Pty) Ltd currently uses five submerged arc furnaces to produce silicomanganese (SiMn) at a capacity of 180,000 tons per year. Transalloys was looking to expand its production capabilities, requiring more capacity for air pollution control. Rather than build larger baghouses – an investment that would also require larger fans and more new equipment – Transalloys chose to investigate the potential APC capacity increase it could achieve with GORE LOW DRAG Filter Bags.

SOLUTION

In its investigation of Gore's solution, Transalloys performance tested the new filter technology in one of its baghouses. GORE LOW DRAG Filter Bags were installed in one of the baghouse's eight compartments, while two adjacent compartments were fitted with standard ePTFE membrane filter bags, both new and previously used. The pressure differentials and relative flows through each compartment were monitored to determine the capacity increase achievable with Gore's filter bags.

RESULT


After 33 weeks of testing, the GORE LOW DRAG Filter Bags continued to provide approximately 26 % more gas flow than either of the other test compartments at comparable pressure drops, with fewer emissions overall. The Gore filter bags also delivered an excellent response to start-up and to the cleaning system. By providing additional flow capacity without adverse effects to bag life or emissions, the GORE LOW DRAG Filter Bags allow Transalloys to consider either saving electrical (fan) energy at current flow rates or potentially increasing system flow rates to accommodate greater furnace production.




DATA BOX

Application:	Silicomanganese (SiMn) production
Process:	Submerged arc furnace
Filter material:	GORE LOW DRAG Filter Bags
Plant capacity:	Increasing
Gas flow rate:	120,000 Nm ³ /hr
Operating temperature:	180 °C (up to 250 °C)
Total filter area:	5,460 m ²
Air-to-cloth ratio:	34 Am/h (0.6 Am/min)
Differential pressure:	2.06 kPa


Conventional Fabric

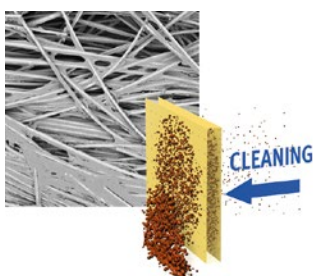

Standard Membrane

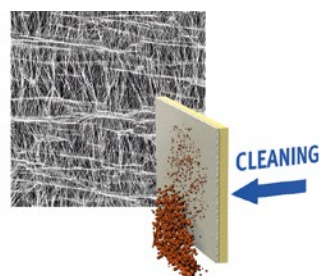


GORE LOW DRAG Membrane

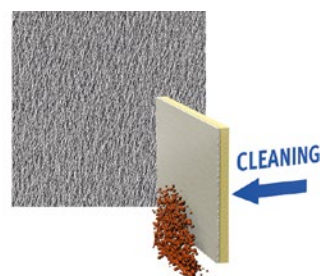



GORE® Filtration Products

FLOW RATIO: GORE® LOW DRAG™ FILTER BAGS VS. STANDARD BAGS (NEW)

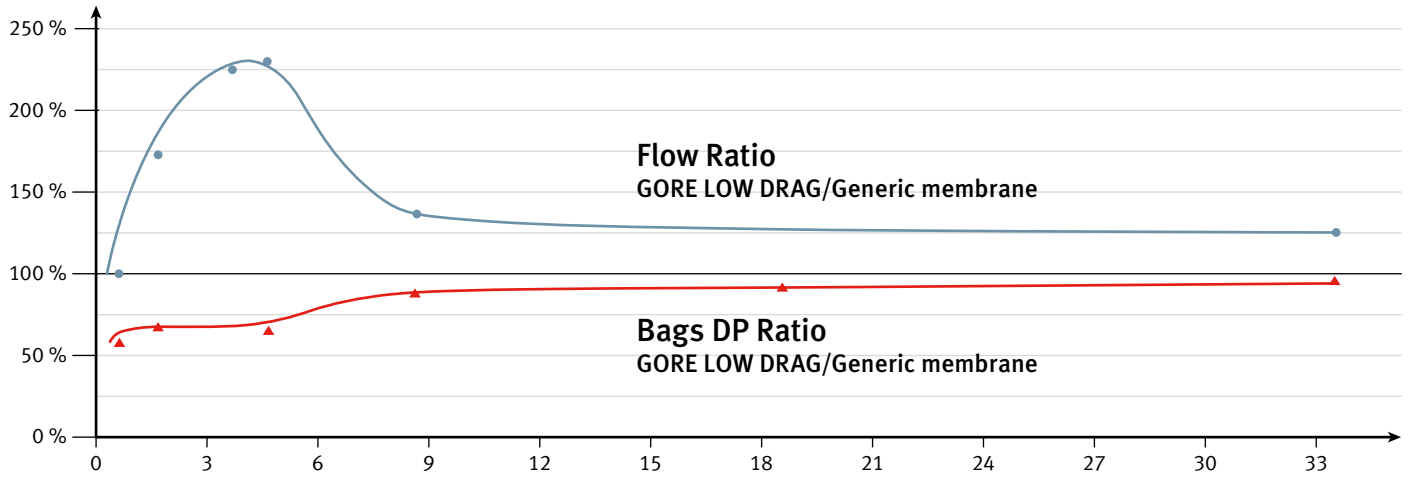

FOR INDUSTRIAL USE ONLY. Not for use in food, drug, cosmetic or medical device manufacturing, processing, or packaging options.

GORE, GORE LOW DRAG and designs are trademarks of W. L. Gore & Associates © 2011–2018 W. L. Gore & Associates, Inc.

W. L. Gore & Associates, Inc.
101 Lewisville Road, Elkton, MD 21922
US Toll-Free: 800.437.5427 • Phone: +1.410.392.3300
Fax: +1.410.506.0107 • E-mail: filterbags@wlgore.com

gore.com/filterbags

