

SIMPLE, COST-EFFECTIVE MERCURY AND SO₂ CONTROL

Reduction of Mercury and SO₂ Emissions

Sewage sludge, municipal solid waste, and hazardous waste incinerators around the world are under continual regulatory pressure to reduce emissions of various pollutants. Activated carbon injection and fixed carbon beds are two commonly accepted technologies to control mercury. Each have their benefits and limitations and selecting the best solution will depend on the site-specific situation. Now there is a proven alternative that eliminates those limitations.

Multi-Pollutant Control System

The GORE® Mercury & SO₂ Control System is a unique fixed catalyst and sorbent system for removing gas phase mercury and SO₂ from incineration flue gas. The system is based on stackable modules that utilize an open channel design which results in very low pressure drop. Operation is passive; the modules will continuously chemically adsorb mercury and convert SO₂ to liquid sulfuric acid without requiring any adjustment, regeneration, or replacement.

Low Capital Cost vs. Carbon Beds

- Zero and small footprint installation approaches
- No gas conditioning required after scrubber

Low Operating Cost

- Long module lifetime
- No maintenance or adjustments needed
- Low pressure drop

Low Process Impact

- No injection of activated carbon or chemicals
- No impact on ash properties
- No impact on waste water treatment system

SO₂ Removal Co-Benefit


- Further savings by generating a valuable by-product




The Science Behind the Solution

At the heart of the technology is an innovative, fluoropolymer-based material developed W. L. Gore & Associates: Sorbent Polymer Catalyst (SPC) composite material. The sorbent in the SPC material efficiently captures both elemental and oxidized mercury. Since there are no injected sorbents or chemicals, there is no concern over ash contamination or creating additional particulate matter that needs to be collected.


SO₂ in the flue gas is catalytically converted to liquid sulfuric acid which is expelled out of the hydrophobic SPC material as large droplets.

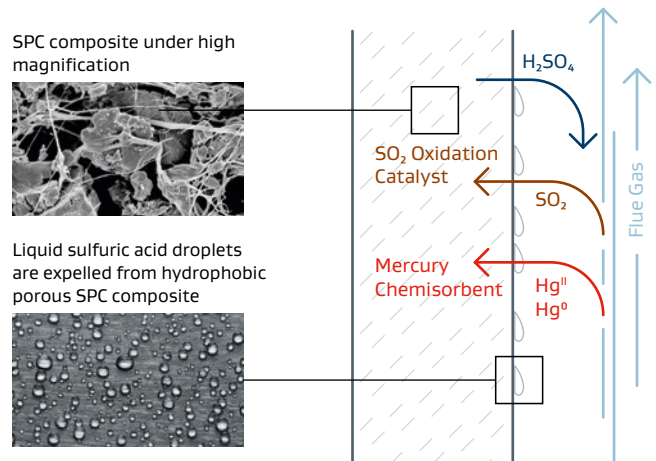

The SPC composite captures and sequesters elemental and oxidized mercury while converting SO₂ to liquid sulfuric acid.

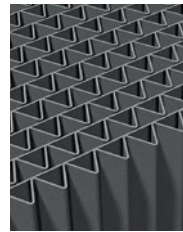

The unique open channel structure of the GORE® Module provides extremely low pressure drop.

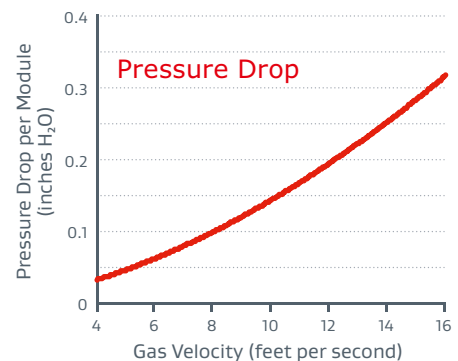

FOR INDUSTRIAL USE ONLY. Not for use in food, drug, cosmetic or medical device manufacturing, processing, or packaging operations.

All technical information and advice given here are based on Gore's previous experiences and/or test results. Gore gives this information to the best of its knowledge, but assumes no legal responsibility. Customers are asked to check the suitability and usability in the specific application, since the performance of the product can only be judged when all necessary operating data are available. The above information is subject to change and is not to be used for specification purposes. Gore's terms and conditions of sale apply to the sale of the products by Gore.

GORE, *Together, improving life* and designs are trademarks of W. L. Gore & Associates. © 2017–2022 W. L. Gore & Associates, Inc.