

## GORE® Ozonation Modules

For Semiconductor & Microelectronics Fabrication Processing

# The cleanest, bubble-free, highest concentration ozone water solution

The industry is shifting to ozone water treatment as an alternative to commonly used chemical-based mixtures for a more environmentally friendly and cost-saving cleaning process. They need reduced conventional chemical consumption, ease of waste treatment, and a safe and energy-efficient process at room temperature. The industry also needs cleaner ozone water at a higher concentration beyond the current benchmark to help increase yield. Cleaner ozone water ensures no organic contamination on Si wafer and FPD applications.

Gore offers unique ozonation modules that use expanded polytetrafluoroethylene (ePTFE) membrane technology to solve these challenges compared to alternative technologies.

### Proven continuous, consistent concentration & flow

GORE® Ozonation Modules are proven to achieve the highest concentration up to 200 mg/L, unlike alternative technologies. They continuously and consistently dissolve ozone gas into ultra-high pure water to generate ozone water (Table 1 and Figures 1-3). Manufactured with microporous ePTFE membranes, these modules allow high water entry pressure (WEP) of more than 0.40 MPa.

Our unique microfiltration membrane technology generates the highest purity and bubble-free ozone water available on the market today than ozone water generated with mechanical mixing technology (Table 2).



#### Typical Applications

- Silicon (Si) wafer production
- Logic and memory fabrication
- LED/OLED/QOLED flat panel display production
- Photomask

#### Benefits

- Bubble-free, ultra-high pure ozone water at highest concentration up to 200 mg/L
- Cleanest ozone water due to unique fluoropolymer construction
- No particle contamination due to ePTFE membrane tube
- High WEP > 0.40 MPa due to microporous membrane technology
- Proven continuous and consistent operation
- Easy-to-control ozone water flow rate and concentration

## GORE® Ozonation Modules


For Semiconductor & Microelectronics Fabrication Processing

**Table 1: Product Characteristics<sup>1</sup>**


Property	Gore Part Number	
	GN-142-300	GN-142-650
Length (Flange-to-Flange) mm	300	650
Diameter mm	142	142
Membrane Material	ePTFE	ePTFE
Housing Material	PTFE/PFA	PTFE/PFA
Ozone Concentration ppm	Up to 200	Up to 200
Water Entry Pressure (WEP) MPa	> 0.40	> 0.40
Maximum Liquid Pressure MPaG	0 to 0.35	0 to 0.35
Maximum Gas Pressure MPaG	0.25	0.25
Recommend Operating Temperature °C	0 to +30	0 to +30

1. Gore recommends replacing modules after 5 years in operation (or use) for consistent and reliable performance.


**Figure 1: Dissolving Mechanism of GORE® Ozonation Modules**

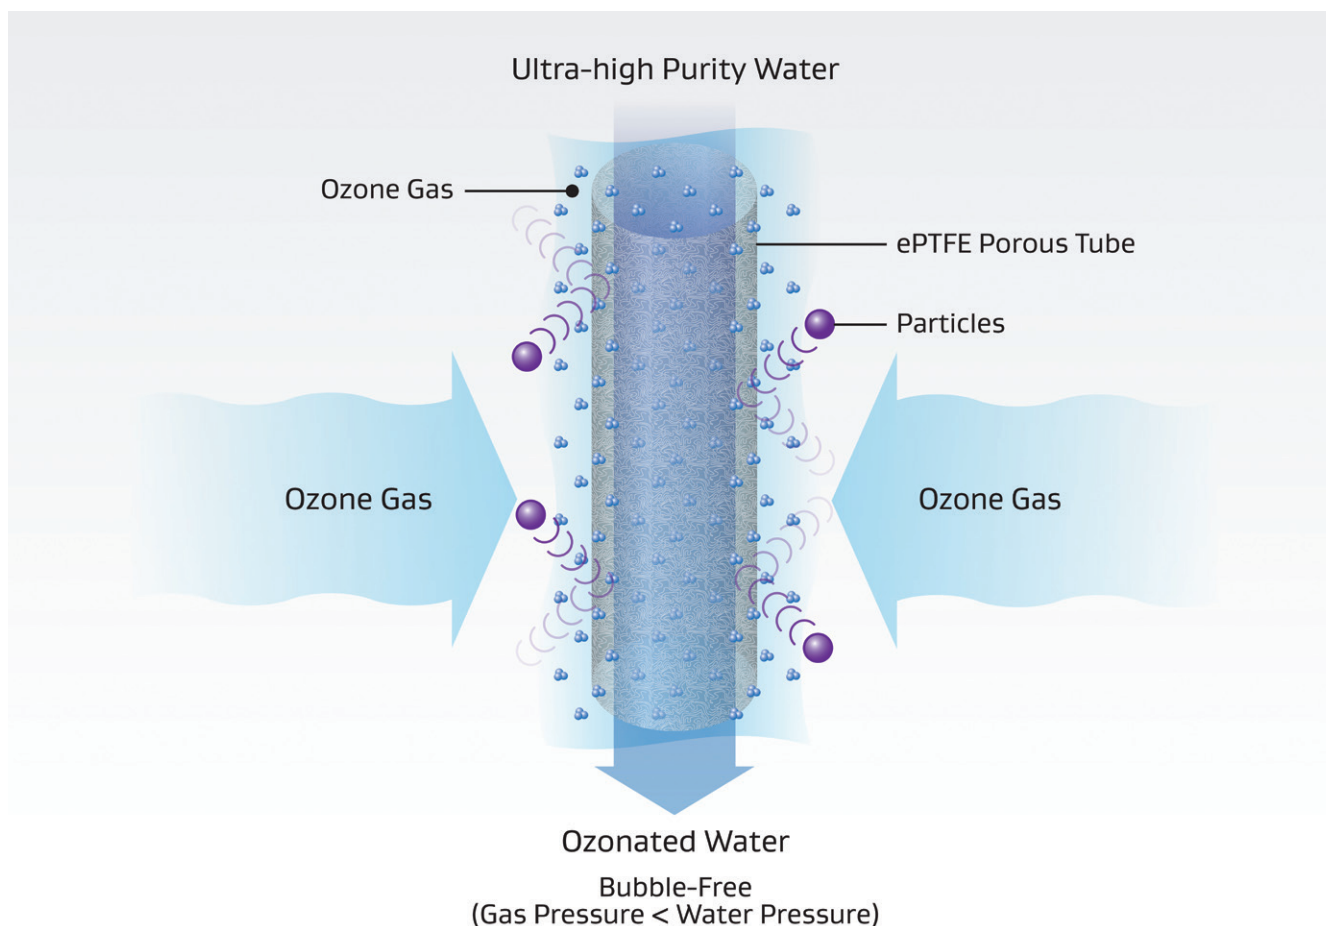

**Figure 2: Ozone Dissolving Performance of GORE® Ozonation Modules<sup>1</sup>**

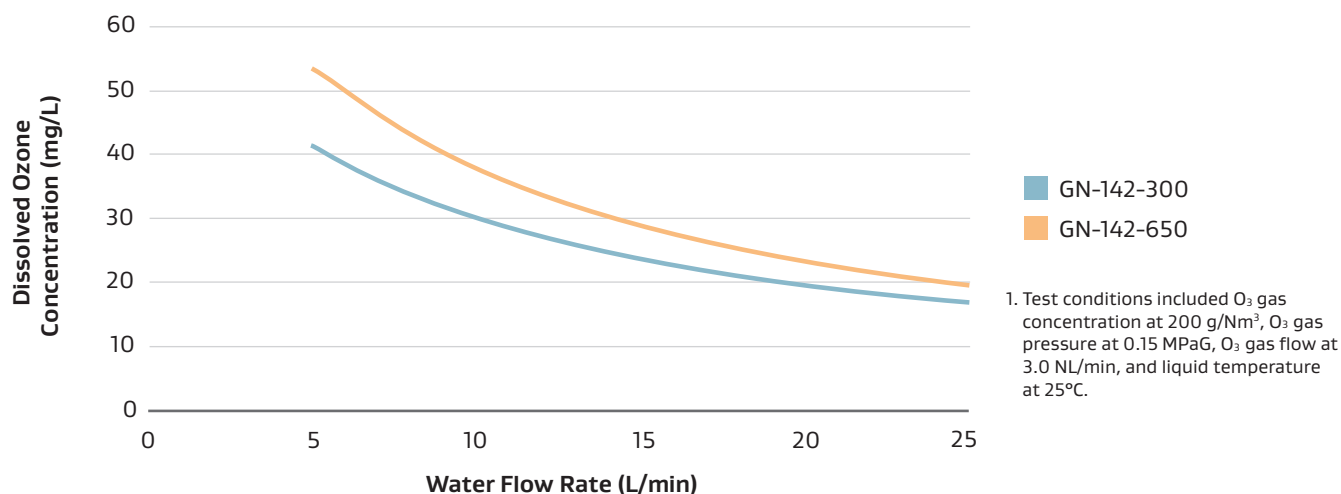

**Figure 3: Pressure Drop Performance of GORE® Ozonation Modules<sup>1</sup>**

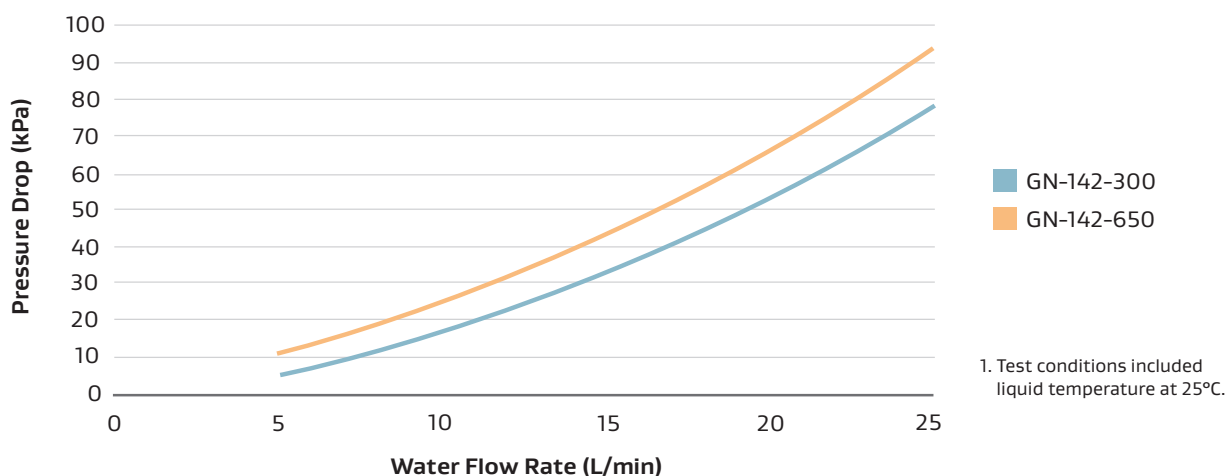

**Table 2: Comparison of Ozone-Dissolving Technologies**

Characteristics	GORE® Ozonation Modules	Mechanical Mixers (Ejector, Static Mixer)
Cleanliness	<ul style="list-style-type: none"> <li>Bubble-free</li> <li>No particles within O<sub>3</sub> gas with ePTFE membranes</li> </ul>	<ul style="list-style-type: none"> <li>Potential bubbles from direct injection of O<sub>3</sub> gas</li> <li>No filtration function to remove potential particles within O<sub>3</sub> gas</li> </ul>
Operability	Consistent ozone water concentration and flow	Inconsistency due to the effect of water and gas pressure fluctuation

## Ordering Information

For more information or to place an order for GORE® Ozonation Modules for semiconductor and microelectronics fabrication processing, please contact a Gore representative at [gore.com/ozonation-modules-contact](https://gore.com/ozonation-modules-contact).

Information in this publication corresponds to W. L. Gore & Associates' current knowledge on the subject. It is offered solely to provide possible suggestions for user experimentations. It is NOT intended, however, to substitute for any testing the user may need to conduct to determine the suitability of the product for the user's particular purposes. Due to the unlimited variety of potential applications for the product, the user must BEFORE production use, determine that the product is suitable for the intended application and is compatible with other component materials. The user is solely responsible for determining the proper amount and placement of the product. Information in this publication may be subject to revision as new knowledge and experience become available. W. L. Gore & Associates cannot anticipate all variations in actual end user conditions, and therefore, makes no warranties and assumes no liability in connection with any use of this information. No information in this publication is to be considered as a license to operate under or a recommendation to infringe any patent right.

NOTICE — USE RESTRICTIONS APPLY. Not for use in food, drug, cosmetic or medical device manufacturing, processing, or packaging operations.

GORE, *Together, improving life* and designs are trademarks of W. L. Gore & Associates. © 2022 W. L. Gore & Associates

---

