



GORE® Protective Vents
Case History

ENSURE RF SYSTEM RELIABILITY WITH THE RIGHT IP RATING FOR HEAVY RAIN CONDITIONS

Together, improving life



Situation

Fingu, a well-respected manufacturer known for its Radio Frequency (RF) devices for mobile telecom systems, was designing and supplying RF subsystems for a global telecom player. These subsystems were mounted on the top of telecom towers, in open environments at multiple locations throughout the world. One location, which was subject to typhoons, also experienced unusually fierce rainstorms during the first year the RF subsystem was installed.

These unusually heavy rains, driven by high-force winds, caused water to enter the housing of some of the combiner units, compromising their integrity and performance.

Challenge

The RF subsystem's housing, which was rated IPX7, was designed for water immersion. The Fingu engineering team was also aware of the need to protect this externally-mounted unit from water jets. Yet, water had penetrated the housing. Several failed combiners, returned from the field, were completely filled with water. In all the failed units, water had penetrated the vent membrane and adhesive. Obviously, the specified vent was not robust enough to resist the jet pressure created by the storms that lashed these tower-top devices. But why not? Why was there water ingress, when the housing passed the IPX7 water immersion test? Fingu contacted Gore to quickly identify the cause of failure. The challenge was to identify a venting solution that could:




This combiner was returned from the field full of water

- Reliably prevent these water ingress problems in the future
- Effectively equalize pressures, to reduce strain on housing seals
- Allow immediate repair of the failed units, without delay
- Be incorporated into the existing units without any modifications

"Our telecom customer was very pleased with how quickly we resolved this issue, and they are now very satisfied with the way these tower-mounted combiners are performing. In the 18 months since we began using the VE7 vents, there have been no more reports of water intrusion – not in the combiners that were retrofitted, nor in any of the new units that have been installed since then. We look forward to continuing our very productive relationship with our telecom customer, and with Gore, in the future."

– Liu Ming Xing
Mechanical Design Manager
at Fingu

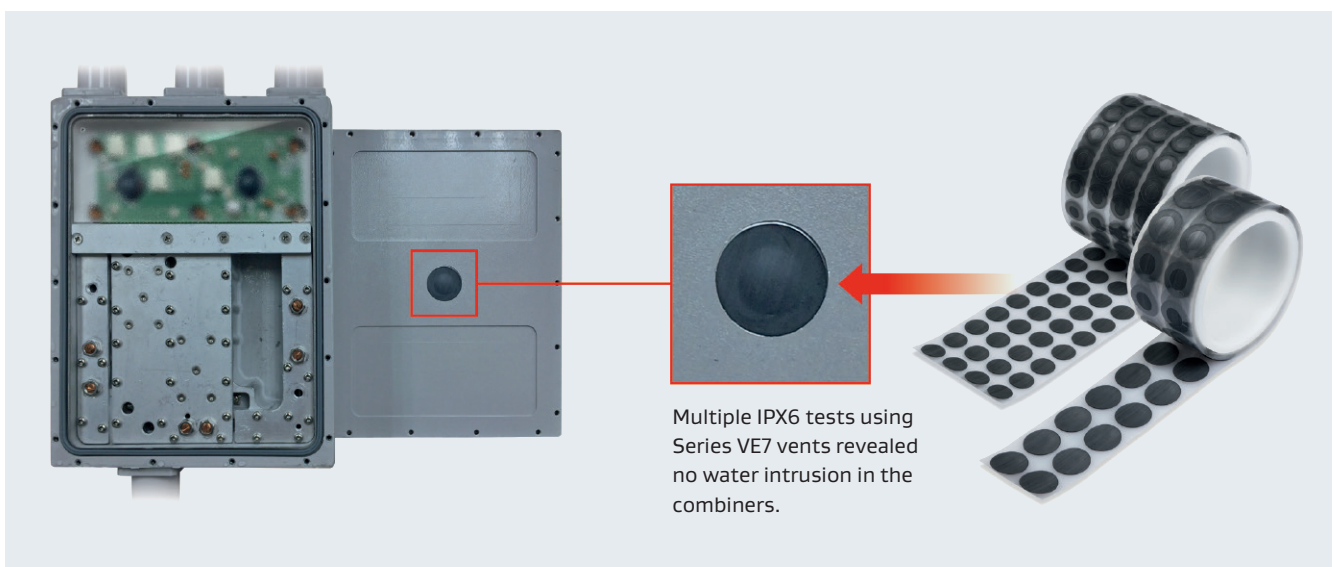

Solution

Working with the Fingu engineering team, Gore's application engineers did a detailed failure analysis, beginning with the initial venting specification. While IPX7/IPX8 ratings define resistance to water immersion, they do not confer protection against water jets. The IEC 60529 standard recognizes that these are two entirely different categories of waterproofing.

For tower-top telecom equipment that is mounted in an open environment with high winds and heavy rains, the most relevant Ingress Protection rating would be IPX5 or IPX6. These ratings would confer protection against the dynamic water pressures created by the high-force winds and rain in the towers' environment. Therefore, Gore recommended changing the units' waterproofing standard from IPX7 (immersion protection) to IPX6 (the most robust level of water jet protection).

To satisfy this IPX6 standard, the Gore engineers recommended a very robust adhesive vent: GORE® Protective Vents' Adhesive Series VE7 (Part Number VE71221). This vent is widely used in IPX6 telecom equipment and devices, where it has proven reliable in equalizing pressures and preventing water ingress*.

Series VE7 has a crush-resistant ePTFE GORE® Membrane that readily withstands high-pressure jets, because it is much thicker than traditional PET adhesive vents that are commonly available. Series VE7 also has a very strong silicone adhesive that bonds well to housings, even those with challenging surface roughness. With its robust membrane and adhesive, VE7 provides stronger protection against water jets, to better withstand tower-top conditions in stormy environments.

Using Fingu-provided combiner units, Gore installed VE7 vents and performed validation testing. After multiple rounds of IPX6 water-jet testing in the Gore laboratory, no water intrusion was observed.

As a result of this cooperative technical partnership, the Fingu engineering team adopted Series VE7 vents as the solution. Series VE7 was retrofitted into all combiners returned from the field, and was also installed into every new unit that was being produced.

Diverse Product Line Engineered for Simple Integration

GORE® Protective Vents are manufactured in many different sizes and shapes, making it easy to choose the right vent for any application. These vents are easy to integrate into new or existing designs to meet the needs of a broad range of applications and markets. For example, these vents:

- Tolerate temperatures ranging from -40 °C to 125 °C
- Perform to protection standards up to IP68
- Provide maximum protection for applications in harsh environments through molded plastic or metal vents
- Install easily by being adhered, threaded, snapped or welded to a variety of enclosure materials

* IP ratings depend on the product housing's design.
Please contact a Gore representative for more information.

About Gore

W. L. Gore & Associates is a global materials science company dedicated to transforming industries and improving lives. Since 1958, Gore has solved complex technical challenges in demanding environments — from outer space to the world's highest peaks to the inner workings of the human body. With more than 11,000 Associates and a strong, team-oriented culture, Gore generates annual revenues of \$3.8 billion.

Gore develops products and technologies that address complex product and process challenges in a variety of markets and industries, including aerospace, automotive, pharmaceutical, mobile electronics and more. Through close collaboration with industry leaders across the globe, Gore enables customers to design their products and processes to be safer, cleaner, more productive, reliable, durable and efficient across a wide range of demanding environments.

Learn more at gore.com/protectivevents.



FOR INDUSTRIAL USE ONLY. Not for use in food, drug, cosmetic or medical device manufacturing, processing, or packaging operations.

GORE® Protective Vent(s) are manufactured under the generic industrial ISO 9001 quality system. No other certifications can be provided by Gore for this GORE® Protective Vent. All technical information given is based on Gore's previous experiences and/or test results. Gore gives this information to the best of its knowledge, but assumes no legal responsibility. Customers are asked to check the suitability and usability in the specific application, since the performance of the product can only be judged when all necessary operating data are available. The above information is subject to change and is not to be used for specification purposes. Gore's terms and conditions of sale apply to the sale of the products by Gore..

GORE, *Together, improving life* and designs are trademarks of W. L. Gore & Associates. © 2014–2023 W. L. Gore & Associates, Inc.

INTERNATIONAL CONTACTS

Australia +61 2 9473 6800
Benelux +49 89 4612 2211
China +86 21 5172 8299
France +33 1 5695 6565
Germany +49 89 4612 2211
India +91 22 6768 7000

Italy +39 045 6209 240
Japan +81 3 6746 2570
Korea +82 2 393 3411
Mexico +52 81 8288 1281
Scandinavia +46 31 706 7800
Singapore +65 6733 2882

South America +55 11 5502 7800
Spain +34 93 480 6900
Taiwan +886 2 2173 7799
United Kingdom +44 1506 460123
USA +1 410 506 7812

W. L. Gore & Associates, GmbH
Hermann-Oberth-Str. 26, 85640 Putzbrunn, Germany
T +49 89 4612 2211 F +49 89 4612 2302 E protectivevents@wlgore.com
gore.com/protectivevents

