




GORE® Turbine Filters

More Power, Less Wear

Hydrophobic Composite E12 HEPA Filter With Optional Insert

Maintain High Power Output

GORE® Turbine Filters provide filtration through use of a patented multi-layer construction to capture $\geq 99.5\%$ of all contaminants and block water ingestion. This eliminates power losses and maintains clean compressor efficiency.


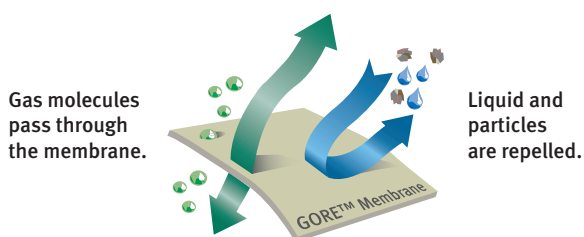


Eliminate Off-Line Washes

By capturing or blocking all particulate, many users are able to eliminate shutdowns for water washing. This increases machine availability and reliability. Many turbines that use Gore filters have been running for tens of thousands of hours without the need to shut down for water washing.

For dirty environments, or to extend the life of the filter, Gore recommends the use of the pleated prefilter insert.

Low Pressure Drop

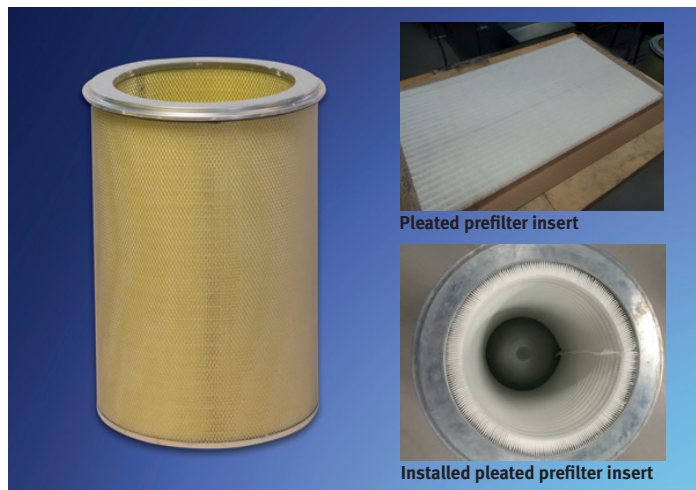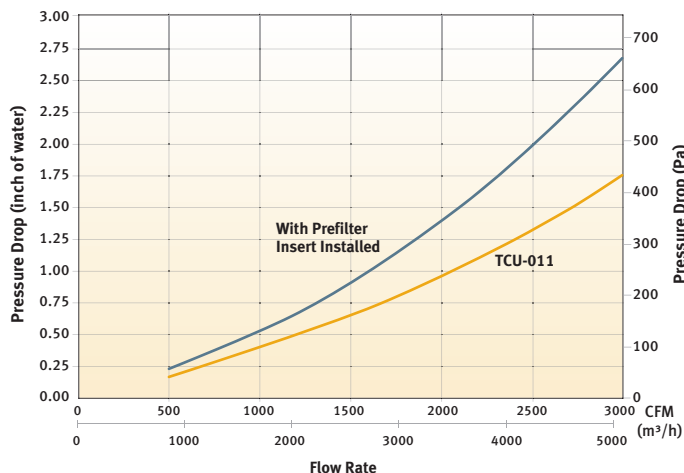

KEY FEATURES

- E12 filtration efficiency $\geq 99.5\%$ at MPPS
- Hydrophobic membrane prevents water ingress
- Stops penetration of particles and dissolved salts
- High burst pressure
- Proven lifetime
- Low initial pressure drop

KEY BENEFITS

- Eliminates compressor fouling and associated power loss
- Reduces turbine wear
- Eliminates off-line water washings
- Maintains consistent low heat rate
- Reduces salt induced corrosion

Stop Salt and Water Ingress

1. Gore's high efficiency ($\geq 99.5\%$) multi-layer composite removes salt crystals and other submicron particulates from passing through the filter.
2. Gore's hydrophobic membrane blocks both water and dissolved salts from entering the compressor. This prevents corrosion damage which can contribute to unexpected failures and major outages.



GORE® Turbine Filters

More Power, Less Wear

Construction Materials

Filter Media	Fully synthetic composite with ePTFE membrane
Endcaps	Galvanized 60G60G per ASTM 879M
Inner and Outer Mesh	Galvanized G60 per ASTM A653
Potting	Polyurethane
Gasket	EPDM rubber

Application Performance


Efficiency	E12 according to EN 1822 Min. 99.5 % @ MPPS
Wet Burst Pressure	> 7500 Pa (30 in wg)
Initial Pressure Drop with and without insert (higher numbers with insert)	
TCU011	161 Pa @ 2550 m ³ /h (0.65 in wg @ 1500 cfm)
TCP022 insert	225 Pa @ 2550 m ³ /h (0.90 in wg @ 1500 cfm)
Recommended Maximum dP	1000 Pa (4 in wg)
Temperature Range	-40 °C to +65 °C (-40 °F to +149 °F)

Dimensions	Outside Diameter	Inside Diameter	Length
TCU011	445 mm (17.5 in)	355 mm (14 in)	661 mm (26 in)


Direct replacement of most conventional filters with no modifications required to filter housing.

Operational Mode

Static

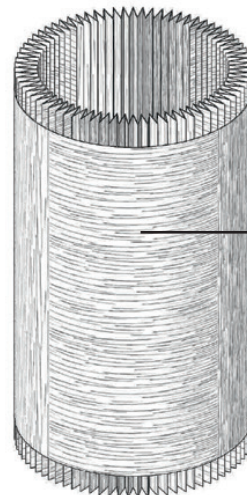

Pleated Insert

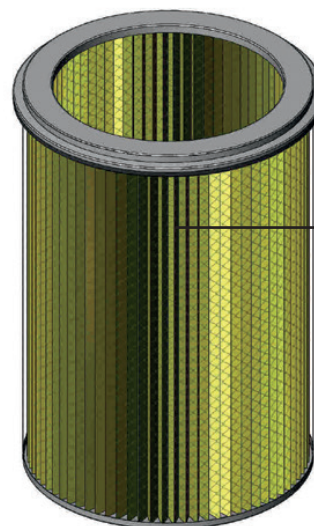

Composite Filter

All data expressed as typical values. Please contact W. L. Gore & Associates directly to confirm current information and to verify data for a specific part number. Specifications are subject to change.

www.gore.com/turbinefilters
E-Mail: turbinefilters@wlgore.com

GORE and designs are trademarks of W. L. Gore & Associates
© 2012, 2014, 2016 W. L. Gore & Associates, Inc.
Covered by the following patents: EP16741441, US7501003, US8147583, US9205359

W. L. Gore & Associates

Europe
W. L. Gore & Associates GmbH
Hermann-Oberth-Str. 26
D-85640 Putzbrunn
Germany
Phone: +49 89 4612-2211
Fax: +49 89 4612-2302

Americas
W. L. Gore & Associates, Inc.
101 Lewisville Road
Elkton, MD 21921
USA
Phone: +1 410 392 3300
Fax: +1 410 398 6624

Middle East
W. L. Gore & Associates GmbH Middle East - Abu Dhabi
P. O. Box 11 44 70
Al Reem Island, Sky Tower, Office 609
Abu Dhabi
UAE
Tel: +971 2 5089444
Fax +971 2 5089445

Contact a Gore application engineer for assistance in determining the appropriate GORE® Turbine Filter for your specific application.

FOR INDUSTRIAL USE ONLY.

Not for use in food, drug, cosmetic or medical device manufacturing, processing, or packaging operations.

