




GORE® Turbine Filters

More Power, Less Wear

Hydrophobic E12 HEPA Pulse Panel Filter With Membrane Media

Maintain High Power Output



GORE® Turbine Filters optimize power output by eliminating performance reducing deposits in your compressor section. Their outstanding E12 filtration efficiency keeps out at least 99.5 % of contaminants at the most penetrating particle size (~0.1 µm). This stops power losses while reducing your fuel consumption and associated CO₂ and NO_x emissions. Machine availability and reliability are also significantly increased because there is no need to stop the turbine for off-line compressor washing.

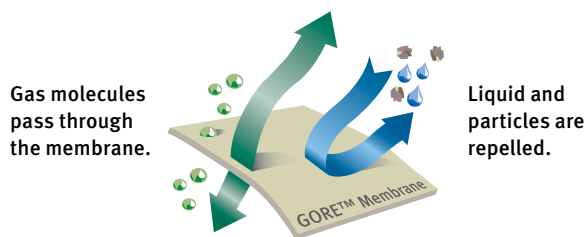

Less Wear

GORE® Turbine Filters significantly reduce your maintenance costs while increasing compressor and turbine lifetimes. Unlike current air intake filters, they have a unique patented filter media that is waterproof and provides reliable protection from corrosive salts. This reduces unexpected failures and major outages by preventing both fine and corrosive particulates from reaching the engine. GORE® Turbine Filters also directly replace your existing filters with no modifications required to filter housing.

Effect of Compressor Fouling on Power Output

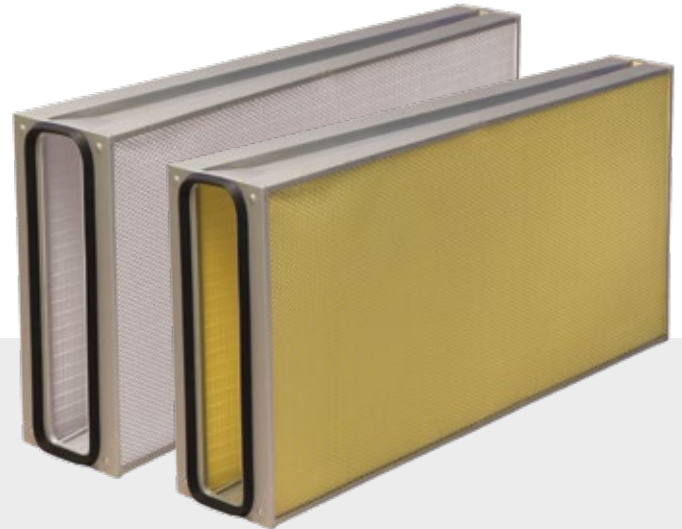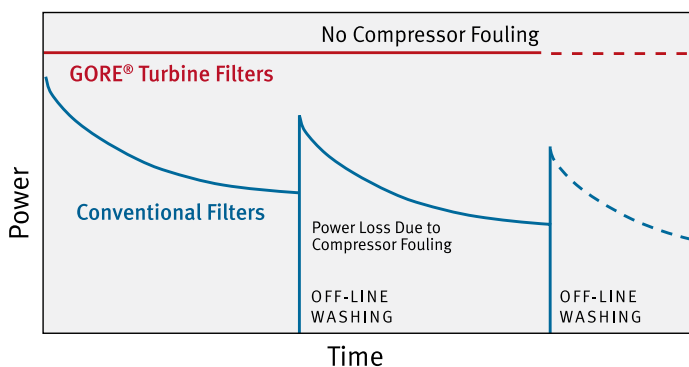

KEY FEATURES

- E12 filtration efficiency ≥99.5% at MPPS
- Hydrophobic membrane prevents water ingress
- Stops penetration of particles and dissolved salts
- High burst pressure
- Proven lifetime
- Low initial pressure drop

KEY BENEFITS

- Eliminates compressor fouling and associated power loss
- Reduces turbine wear
- Eliminates off-line water washings
- Maintains consistent low heat rate
- Reduces salt induced corrosion



GORE® Turbine Filters

More Power, Less Wear


Construction Materials

Filter Media	Fully synthetic composite with ePTFE membrane
End Caps	Galvanized Steel
Inside/Outside Liner	Galvanized Steel
Potting	Polyurethane
Gasket	EPDM rubber

Application Performance

Efficiency	E12 according to EN 1822 Min. 99.5 % @ MPPS (Most Penetrating Particle Size)
Wet Burst Pressure	
TCV039	≥ 6250 Pa (25 in wg)
TCV040	≥ 6250 Pa (25 in wg)
Initial Pressure Drop	
TCV039	215 Pa @ 2550 m³/h
TCV040	215 Pa @ 2550 m³/h
Temperature Range	
TCV039	-40 °C to +65 °C (-40 °F to +149 °F)
TCV040	-40 °C to +75 °C (-40 °F to +167 °F)
Recommended Maximum dP	1000 Pa (4.0 in wg)
Humidity Range	0 to 100% relative humidity

Highest Efficiency at Lowest Pressure Drop

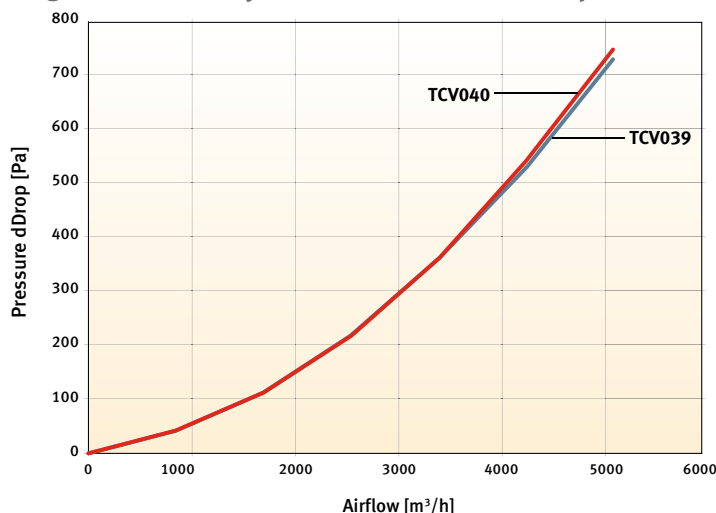


Dimensions

	Depth	Height	Width 1	Width 2
TCV039	1225 mm (without gasket)	611mm	246 mm	165 mm
TCV040	1225 mm (without gasket)	611 mm	246 mm	165 mm

Operational Mode

Pulse cleanable and static

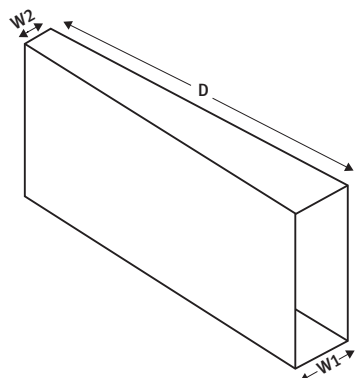

All data expressed as typical values. Please contact W. L. Gore & Associates directly to confirm current information and to verify data for a specific part number. Specifications are subject to change.

www.gore.com/turbinefilters

E-Mail: turbinefilters@wlgore.com

GORE and designs are trademarks of W. L. Gore & Associates.
© 2017, 2018 W. L. Gore & Associates, Inc.
Covered by the following patents: EP 16741441, US 7501003, US 8147583

W. L. Gore & Associates

Americas

W. L. Gore & Associates, Inc.
101 Lewisville Road
Elkton, MD 21921
USA
Phone: +1 410 392 3300
Fax: +1 410 398 6624

Europe

W. L. Gore & Associates GmbH
Hermann-Oberth-Str. 26
D-85640 Putzbrunn
Germany
Phone: +49 89 4612-2211
Fax: +49 89 4612-2302

Middle East

W. L. Gore & Associates GmbH Middle East - Abu Dhabi
P.O. Box 11 44 70
Al Reem Island, Sky Tower, Office 609
Abu Dhabi
UAE
Phone: +971 2 5089444
Fax: +971 2 5089445



Contact a Gore application engineer for assistance in determining the appropriate GORE® Turbine Filter for your specific application.

FOR INDUSTRIAL USE ONLY.

Not for use in food, drug, cosmetic or medical device manufacturing, processing, or packaging operations.