


GORE® CAN Bus Cables (120 Ohms)

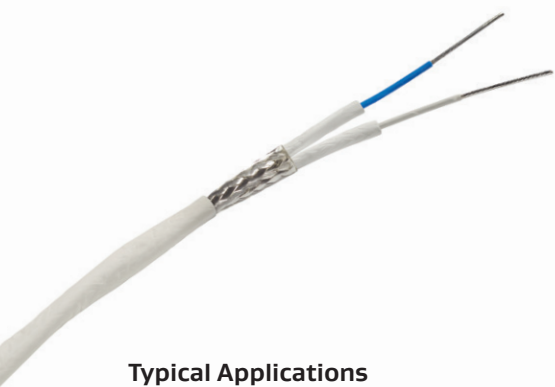

Suitable for today's faster digital networks, Gore's controlled-impedance cables ensure high-quality signals for high data rate transmission up to 1 GHz. They provide versatile protection to shield sensitive wires from extreme mechanical and environmental stress (Table 1). These cables are built to perform accurately, reliably and securely over the application lifespan.

Our CAN Bus cables offer higher flexibility and tighter bend radii for trouble-free installation in aircraft and military vehicles (Figure 1).

Typical Applications

- Avionics/vetronics digital networks
- Cabin management systems
- Controller area networks (CAN Bus)
- Data links
- Electronic diagnostics
- Mission systems
- Serial buses

Standards Compliance

- ABD0031 (AITM 2.0005); BSS7230; FAR Part 25, Appendix F, Part I: Flammability
- ABD0031 (AITM 3.0005); BSS7239: Toxicity
- ABD0031 (AITM 3.0008B); BSS7238; FAR Part 25, Appendix F, Part V: Smoke Density
- ANSI/NEMA WC 27500: Environmental Testing, Jacket and Marking
- SAE AS4373™: Test Methods for Insulated Electric Wire (Contact Gore for available data)
- SAE J1128™: Low Voltage Primary Cable
- SAE J1939™: Serial Control and Communications Heavy Duty Vehicle Network
- VG95218-31: Performance Requirements (GSC-03-84793-VG)

Table 1: Cable Properties

Electrical

Property	Value
Signal Transmission Speed GHz	Up to 1
Standard Impedance Ohms	120 ± 10
Typical Operating Voltage V	< 48
Nominal Velocity of Propagation %	80
Nominal Time Delay ns/m (ns/ft)	4.10 (1.25)
Capacitance pF/m (pF/ft)	42.0 (12.8)
Dielectric Withstanding Voltage Vrms	
Conductor-to-Conductor	1500 / 700 ^a
Conductor-to-Shield	1000


Mechanical / Environmental

Property	Value
Jacket Material	Engineered Fluoropolymer
Jacket Color	White (Laser Markable)
Conductor	Silver-Plated Copper or SPC Alloy
Conductor Color-Coding	Blue/White
Dielectric Material	Expanded PTFE/PTFE
Temperature Range °C	-65 to +200

a. Based on Gore's part number GSC-03-84793-VG for military vehicle systems.

GORE® CAN Bus Cables (120 Ohms)

Figure 1: Compact Footprint

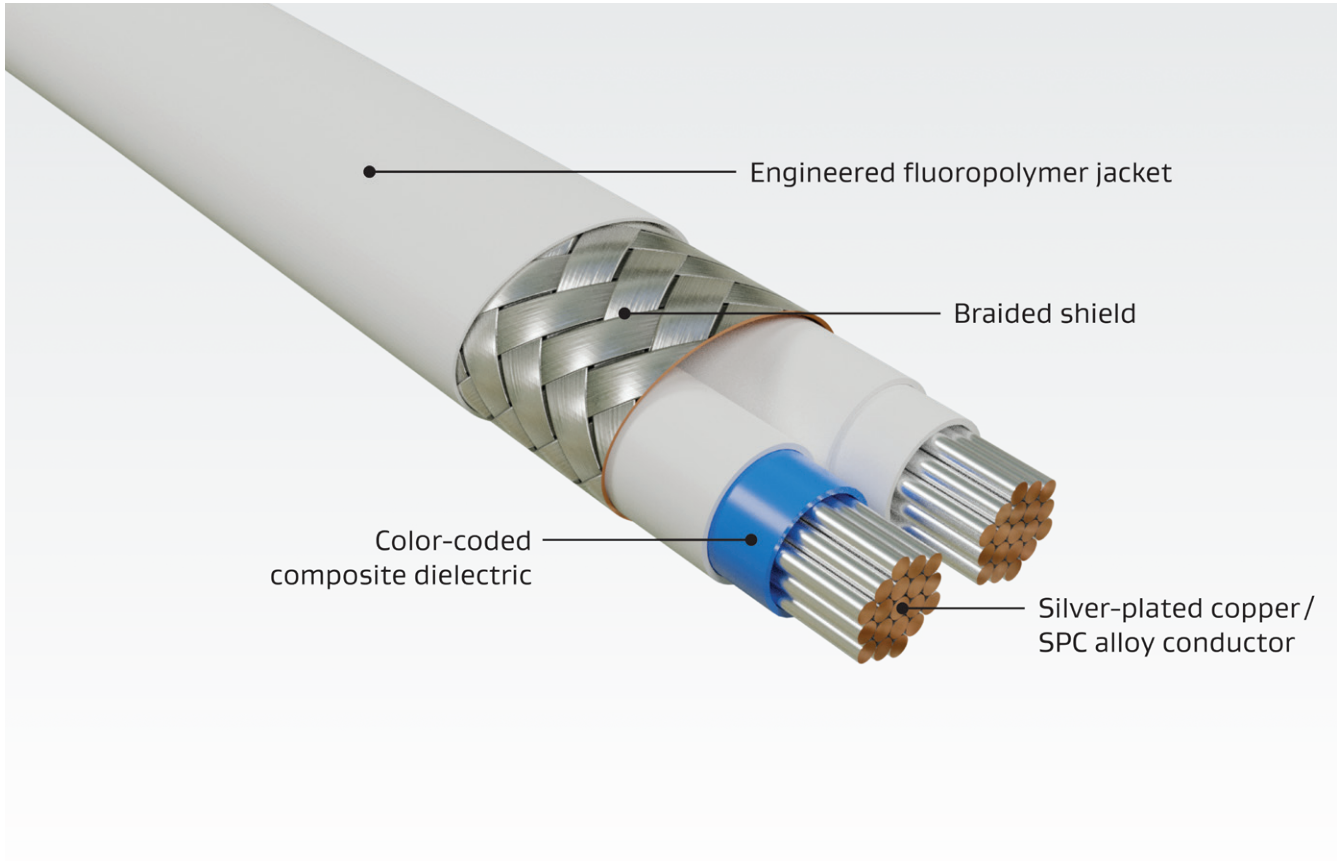

Cable Preparation

For aircraft maintainers, GORE® CAN Bus Cables include a unique inverted dielectric design that enables easier wire preparation and insertion in smaller connector systems.

Standard 120-ohm primary wires have a much larger diameter due to high impedance and typically will not fit into smaller holes unless wires are insulated with thin heat shrink. However, Gore's unique design eliminates the need to remove several inches of insulation from the end and apply heat shrink to fit wires into smaller holes.

The inverted dielectric layers can be stripped off using sharp mechanical strippers set at the next largest AWG size. Carefully cut the outer layers and use your fingertips to pull off gently. For more information regarding cable preparation, contact a Gore representative.

Connector Systems & Backshells

GORE® CAN Bus Cables are designed to fit a variety of high-speed aerospace and defense connector systems and backshells such as ARINC and MIL-STD-38999 with size 8 and 22D contacts. Contact the specific manufacturer such as Amphenol® and Glenair® for exact part numbers, tooling information, and termination instructions.

Table 2: Cable Characteristics

Gore Part Number	Drain Wire	AWG Size (Stranding)	Nominal Outer Diameter mm (in)	Minimum Bend Radius mm (in)	Nominal Weight kg/km (lb/1000 ft)	Typical Insertion Loss dB/30 m (100 ft)			
						100 MHz	200 MHz	500 MHz	1 GHz
GSC-03-85752-22D	No	22 (19/34)	5.1 (0.20)	25.5 (1.00)	28.0 (18.82)	5.6	8.5	13.5	19.0
GSC-03-84793-VG	No	24 (19/36)	4.2 (0.17)	17.2 (0.68)	23.0 (15.46)	6.5	10.0	16.0	22.0
GSC-03-85752-24D	No	24 (19/36)	4.2 (0.17)	21.0 (0.83)	23.0 (15.46)	6.5	10.0	16.0	22.0
GSC-03-86523-00	Yes	24 (19/36)	4.3 (0.17)	21.3 (0.84)	29.5 (19.81)	6.5	10.0	16.0	22.0
GSC-03-85752-26D	No	26 (19/38)	3.5 (0.14)	17.5 (0.69)	15.4 (10.35)	8.0	12.0	18.0	24.0
GSC-03-86524-00	Yes	26 (19/38)	3.6 (0.14)	17.8 (0.70)	23.8 (15.97)	8.0	12.0	18.0	24.0

Samples & Ordering Information

GORE® CAN Bus Cables are available in standard sizes (Table 2). To place an order, contact an authorized distributor for in-stock availability at gore.com/cable-distributors. To view our full inventory and order complimentary samples of selected products for prototyping and evaluation in your application, visit gore.com/hsdc-sample-inventory-air-defense.

For more information or to discuss specific characteristic limits and application needs, contact a Gore representative for aerospace and defense today.

With a compact footprint, Gore's CAN Bus cables enable better flexibility and a smaller bend radius for trouble-free installation in tight areas.



Information in this publication corresponds to W. L. Gore & Associates' current knowledge on the subject. It is offered solely to provide possible suggestions for user experimentations. It is NOT intended, however, to substitute for any testing the user may need to conduct to determine the suitability of the product for the user's particular purposes. Due to the unlimited variety of potential applications for the product, the user must BEFORE production use, determine that the product is suitable for the intended application and is compatible with other component materials. The user is solely responsible for determining the proper amount and placement of the product. Information in this publication may be subject to revision as new knowledge and experience become available. W. L. Gore & Associates cannot anticipate all variations in actual end user conditions, and therefore, makes no warranties and assumes no liability in connection with any use of this information. No information in this publication is to be considered as a license to operate under or a recommendation to infringe any patent right.

NOTICE — USE RESTRICTIONS APPLY. Not for use in food, drug, cosmetic or medical device manufacturing, processing, or packaging operations.

Amphenol is a registered trademark of Amphenol Corporation. Glenair is a registered trademark of Glenair, Inc.

GORE, *Together, improving life*, and designs are trademarks of W. L. Gore & Associates. © 2025 W. L. Gore & Associates, Inc.

