






ENGINE SHUT-OFF: A CHALLENGE TO ELECTRONICS

Whether your car is hybrid, electric or combustion-powered, its electronic components can be damaged or degraded by changes in temperature or altitude. These create pressure changes that can stress the seals of electronic enclosures – while the engine is running, and after a car is parked.

Engine start-ups and shut-offs create heat build-ups that can be particularly hard on electronic enclosures. Wind-cooling helps to compensate while the car is moving. But after the car is shut off, under-hood temperatures spike dramatically. This creates a corresponding – and potentially damaging – pressure spike within unvented enclosures. Venting is needed to preserve seal integrity.

ON-CAR TESTING TELLS THE STORY

On February 3 & 4, 2015, Gore engineers in Munich, Germany measured the effect of commuting on under-hood electronics. They compared two identical housings, one unvented, the other with a GORE[®] Automotive Vent installed. In unvented housings, heat-cycles create equally dramatic pressure-cycles. In vented housings, pressures remain relatively constant, despite the temperature swings.

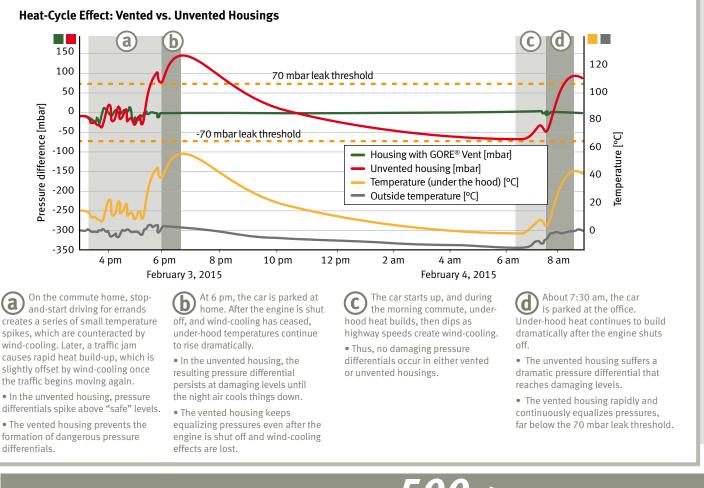

Just 2 engine start-ups/shut-offs per workday will create more than **500 dangerous** under-hood **temperature spikes** per year. In unvented housings, the resulting pressure differentials can create premature seal failure. With GORE® Automotive Vents, these pressure differentials are rapidly and continuously equalized before they can stress seals and threaten the electronics within.

ENGINE RUNNING: MORE CHALLENGES AHEAD

It is not only engine shut-offs that can threaten the integrity of electronic enclosures. Everyday driving exposes a vehicle to many other environmental challenges – any of which could damage enclosures, and the electronics within.

Changes in temperature and altitude create pressure differentials that can stress enclosure seals to failure. This can happen anywhere: driving in mountainous terrain, getting caught in a traffic jam or sudden inclement weather – or even at the car wash.



Temperature Shock: At the Car Wash

Entering the car wash, your Engine Control Unit (ECU) is at normal operating temperature. When the car is

sprayed with cold wash water, a rapid temperature drop occurs.

In an unvented housing, this creates an interior vacuum of about 90 mbar. These sustained vacuums can pull water into the device through leak points such as wires and connectors. Typically, 70 mbar is the threshold for inducing seal failure over time. When seals fail, contaminants will readily enter the housing.

With a GORE[®] Automotive Vent installed on the ECU housing, the pressure differential is rapidly equalized and leak-inducing vacuums are averted.



Altitude and Temperature Change: From Brenner Pass to Lake Garda

On this 2-hour drive, changes in altitude and temperature severely challenge your electric battery enclosure.

In an unvented housing, it takes less than half an hour to reach the critical 70 mbar vacuum – and this extreme stress continues for the remaining 1.5 hours. Under such stresses, even rugged seals will eventually fail, pulling in liquids and particulates. Also, this vacuum exerts extreme force on the housing's surface. Lightweight housings cannot long withstand such force.

With a GORE[®] Automotive Vent, the maximum vacuum is readily equalized without overtaxing the seals.




Heat Build-Up:


Electronics at Work in a Traffic Jam


In the stop-and-start of a traffic jam, your car's distance radar is constantly in action – and heat levels within its enclosure are spiking.

In an unvented housing, this rapid temperature change creates a severe pressure differential – one that will exceed the critical 70 mbar threshold in less than 60 seconds! And each successive minute in the traffic jam continues this intense stress on the housing seals.

With a GORE[®] Automotive Vent, it takes only about 30 seconds before the pressure differential begins to move toward equilibrium.

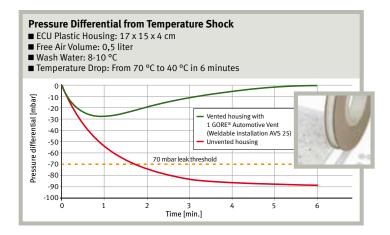

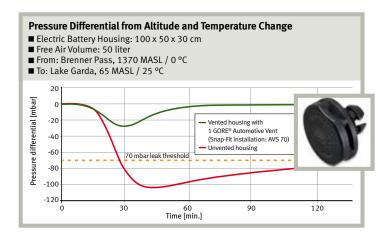

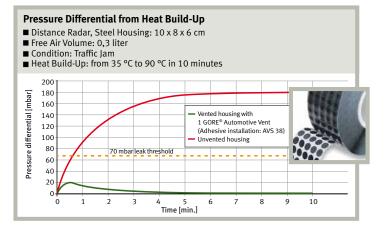




FOR EVERY HIGH-VALUE COMPONENT

Automotive electronics are proliferating. Increasingly, manufacturers replace mechanical and hydraulic components with electronic components, for higher efficiency with reduced emissions and fuel consumption.


The number of electronic driver assistance systems also increases. Along with ABS, ESP and traction control, many models feature distance radar, lane departure alerts, onboard cameras and other active safety systems.

Today's vehicles can have more than 100 sensors, 30 control units, 20 motors and actuators! GORE[®] Automotive Vents can help enclosures more effectively protect all of them!

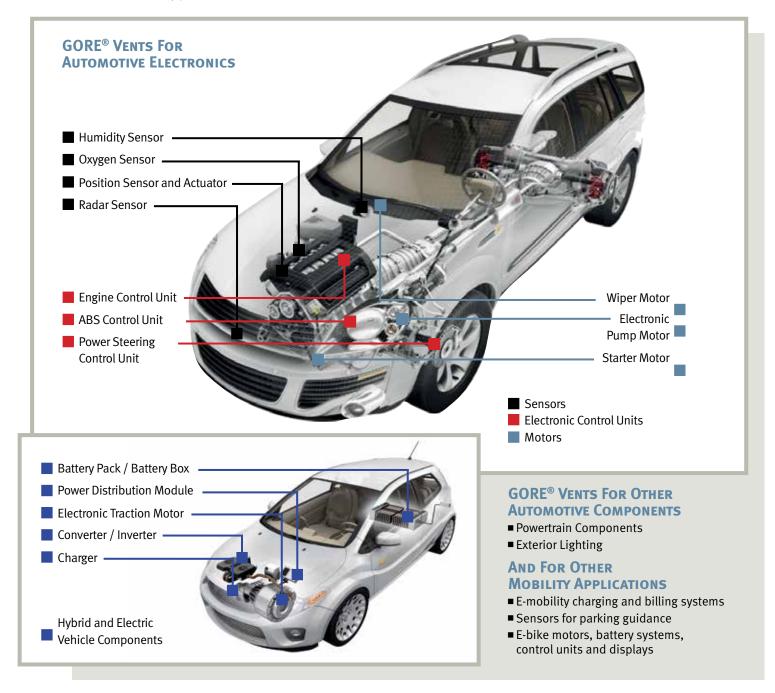

GORE SOLVES MULTIPLE CHALLENGES

GORE® Vents outperform other approaches. They offer a more comprehensive solution to the many environmental challenges that can affect electronic components on automotive platforms worldwide.

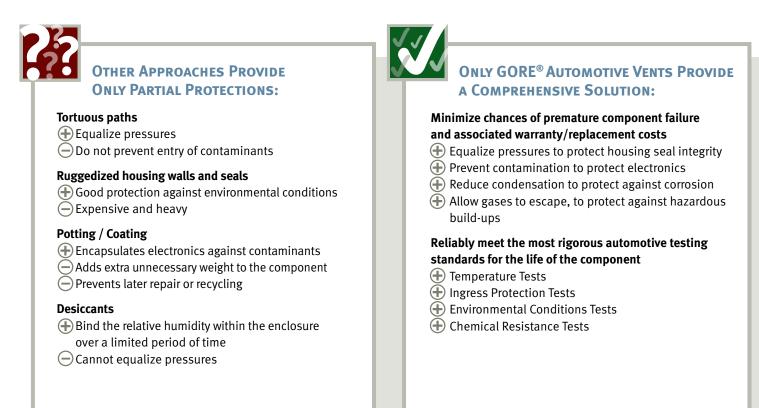


THE GORE[™] MEMBRANE FOR ADVANCED PROTECTION

The GORE[™] Membrane offers an advanced level of protection against the hazards common to automotive applications.

Made of chemically-inert ePTFE, it can withstand temperatures from -150 °C to +240 °C – ideal for use with today's smaller engines that can run at 150 °C or more. With holes 20,000 times smaller than a drop of water, the GORE[™] Membrane retains high airflow while effectively blocking contaminants.

Engineered for hydrophobic and oleophobic protection in automotive applications, the GORE[™] Membrane also delivers high roll-off. It quickly sheds water, oils and solvents after contact, so they won't cling and obstruct airflow.

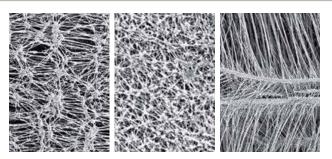

Using Gore's proprietary technology, the membrane structure can be engineered in different ways, for optimal performance in different applications. Gore can help identify the best membrane for your application.



RELIABLE PERFORMANCE FOR SUSTAINED PROTECTION

EQUALIZE PRESSURES TO PROTECT HOUSING SEAL INTEGRITY

Repeated pressure differentials inside the housing will stress seals to failure, allowing ingress of contaminants that can damage electronic components. GORE® Automotive Vents rapidly equalize pressure differentials, effectively preventing the internal vacuums or pressure build-ups that stress seals.

GORE® Automotive Vents rapidly equalize pressures with continuous, bi-directional air exchange across the membrane.

PREVENT CONTAMINATION TO PROTECT ELECTRONICS

GORE[®] Automotive Vents reliably block ingress of all the contaminants automotive components will face over their lifetimes. GORE[™] ePTFE Membranes offer oleophobic as well as hydrophobic protection, to repel oils and other low surface-tension automotive fluids, as well as common road hazards like water, mud, dust and dirt.

GORE® Automotive Vents prevent contamination because they effectively block ingress of liquids and particulates.

REDUCE CONDENSATION TO PROTECT AGAINST CORROSION AND MALFUNCTIONS

Moisture can enter a housing through permeation, absorption/ desorption or condensation. Without venting, moisture can remain and induce corrosion. GORE[®] Automotive Vents reliably release moisture that enters through all these paths, to help avert corrosion or premature component failure.

GORE[®] Automotive Vents reduce condensation because water vapor molecules can freely exit through the membrane.


Allow Gases to Escape, to Protect Against Hazardous Build-Ups


During normal operation and recharging cycles, e-batteries generate heat and may emit hydrogen or other potentially hazardous gases. GORE[®] Automotive Vents effectively dissipate hazardous gas molecules to reduce explosion hazards, while maintaining an effective barrier to liquids and particulates.


GORE[®] Automotive Vents prevent gas build-ups because the gas molecules can easily escape through the membrane.





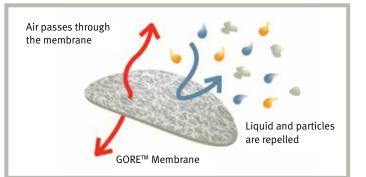

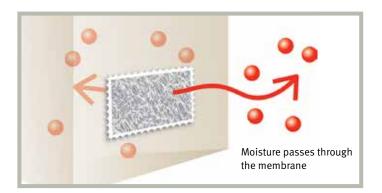

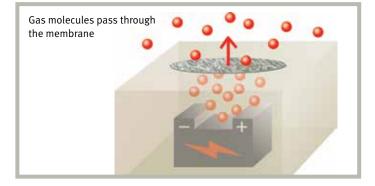

WHY GORE IS THE BETTER ALTERNATIVE

HIGH QUALITY FOR IMPROVED RELIABILITY

- Inventor of the original ePTFE membrane and subsequent innovations in advanced membrane technology
- More than 35 years' experience in automotive electronics applications
- Our vents meet the highest performance requirements and pass the most stringent environmental and durability tests
- All major OEMs and Tier suppliers worldwide have installed billions of GORE[®] Automotive Vents
- Gore venting solutions are trusted globally for their consistent quality and reliability, combined with worldwide engineering support.



A BROAD PORTFOLIO OF VENTING PRODUCTS

GORE® Automotive Vents come in a variety of product forms

For Snap-Fit Installation

- Mechanically robust: a worry-free solution, with the membrane securely integrated and protected
- Easy installation in various housing materials

For Weldable Installation

- Great connection to substrate
- Highest chemical resistance, and temperature stability up to 160 °C

For Adhesive Installation

- Good solution where space is at a premium
- Great condensation management due to larger membrane surface



Snap-Fit Series

Weldable Series

Adhesive Series

Ask how we can help you choose the best GORE[®] Automotive Vent for optimal performance over the lifetime of your automotive component.



ABOUT W. L. GORE & ASSOCIATES

Gore is a technology-driven company focused on discovery and product innovation. Well known for waterproof, breathable GORE-TEX® fabric, the company's portfolio includes everything from high-performance fabrics and implantable medical devices to industrial manufacturing components and aerospace electronics. Gore products have remained at the forefront of creative solutions because they are engineered specifically for challenging applications requiring durable performance where other products fail.

For more than thirty-five years, Gore venting solutions have performed reliably in rugged environments worldwide, in a wide range of applications: in the automotive industry and heavyduty equipment; in outdoor electronics including lighting, telecommunications, solar, and security systems; in portable electronic devices; and in chemical and agricultural packaging. Engineered with the latest materials and technology, Gore's vents are backed by years of research and testing to help extend product life and enhance reliable performance – all to ensure that these venting products can meet the challenging environments and application demands of today's technology.

Headquartered in the United States, Gore employs approximately 10,000 associates in 30 countries worldwide. In Europe, Gore started its first business operations only a few years after the Enterprise's founding in 1958.

Learn more at gore.com/autovents



INTERNATIONAL CONTACTS

Australia	+61 2 9473 6800	Mexico	+52 81 8288 1281
Benelux	+49 89 4612 2211	Scandinavia	+46 31 706 7800
China	+86 21 5172 8299	Singapore	+65 6733 2882
France	+33 1 5695 6565	South America	+55 11 5502 7800
Germany	+49 89 4612 2211	Spain	+34 93 480 6900
India	+91 22 6768 7000	Taiwan	+886 2 2173 7799
Italy	+39 045 6209 240	United Kingdom	+44 1506 460123
Japan	+81 3 6746 2572	USA	+1 410 392 4440
Korea	+82 2 393 3411		

FOR INDUSTRIAL USE ONLY. Not for use in food, drug, cosmetic or medical device manufacturing, processing, or packaging operations.

All technical information and recommendations given here is based on Gore's previous experiences and/or test results. Gore gives this information to the best of its knowledge, but assumes no legal responsibility. Customers should check the suitability and usability in the specific application, since the performance of the product can only be judged when all necessary operating data are available. The above information is subject to change and is not to be used for specification purposes. Gore's terms and conditions of sale apply to the sale of the products by Gore.

GORE, and designs are trademarks of W. L. Gore & Associates. \circledast 2015 W. L. Gore & Associates, Inc.



W. L. Gore & Associates, Inc. 401 Airport Road • Elkton, MD 21921 • USA Phone: +1 410 506 7812 (USA) • Toll-free: +1 800 523 4673 (USA) Fax: +1 410 506 8749 • Email: automotive.us@wlgore.com

gore.com/autovents