GORE IDC Ribbon Cable


High Flex GFX617-XX19-X-XX


High Flex Life Cable

GORE™ IDC High Flex Ribbon Cables provide reliability and superior flex life performance in demanding environments. The GFX617 cable series has sparked a small revolution in high speed continuous-flex applications because no other cables on the market can demonstrate comparable flex life.

The GFX617 cable series is .050" pitch ribbon cable with conductors available in either 28 or 26 AWG. These cables conform to UL Style 20453.

These cables are often used in linear motion, inspection, and pick-and-place applications.

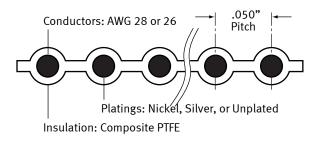

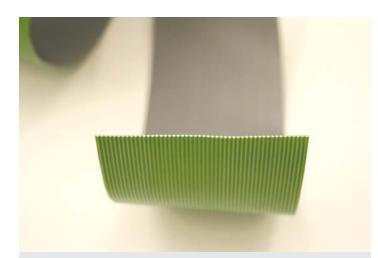

Key Features

- .050" pitch
- 26 AWG or 28 AWG conductors
- Conductor Plating: Silver, Nickel, or Unplated
- Composite PTFE insulation


KEY BENEFITS

- Superior flex life
- Prevents system downtime
- Reliable performance in demanding environments
- Non-outgassing for vacuum environments





ORDERING INFORMATION

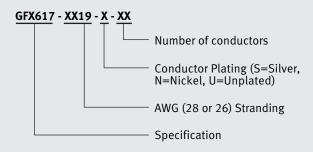

Standard cable color shall be gray/gray. Other colors available upon request.

ELECTRICAL PROPERTIES

Property	Unit	28 AWG	26 AWG					
Capacitance								
Ground, Signal, Ground	pf/ft	8.1	9.7					
Characteristic Impedance								
Ground, Signal, Ground	Ω	128	110					
Velocity of Propagation	as % of air	88	85					
Time Delay	ns/ft	1.17	1.21					
Effective Dielectric Constant	3	1.30	1.40					
Voltage Rating	RMS	300	300					

MECHANICAL PROPERTIES

Property	28 AWG	26 AWG					
Temperature Range							
Nickel-Plated Conductors	-65°C to +260°C	-65°C to +260°C					
Silver-Plated Conductors	-65°C to +200°C	-65°C to +200°C					
Unplated Conductors	-55°C to +150°C	-55°C to +150°C					

FLEXING PROPERTIES

Property	28 AWG	26 AWG
Minimum Flex Life		
3/4" radius	100,000,000 cycles	50,000,000 cycles

W. L. Gore & Associates, Inc. ©2008 W. L. Gore & Associates, Inc. JK070308-33 Rev. 3-11-08 PL					K070308-33 Rev. 3-11-08 PLEI028	
North America 1 (800) 445-GORE (4673)	Europe +49 9144 6010 +44 1382 561511	International 1 (302) 292-5100	China: Beijing +86 10 6510 2980	China: Shanghai +86 21 6247 1999	China: Shenzhen +86 755 8359 8262	GORE
gore.com	More international phone numbers can be found at gore.com/phone	Japan +81 3 3570 8712	Korea +82 2 393-3411	Taiwan +886 2 8771 7799	Singapore +65 6 733 2882	Creative Technologies Worldwide