

CONSTRUCTION: QUAD CABLE

- A. CONDUCTOR: AWG 26(19/38) SP HIGH STRENGTH COPPER ALLOY
- B. PRIMARY INSULATION – ePTFE (AGAINST CONDUCTOR)
- C. SECONDARY INSULATION – PTFE, .044 DIA. MAX. COLORS: RDxGN, BUxOR
- D. FILLER: FEP, .015 DIA. NOM.
- E. BINDER: ePTFE
- F. SHIELD #1: AWG 40(1) SPC BRAID, 92% MIN. COVERAGE
- G. SHIELD #2: AWG 38(1) SPC BRAID, 92% MIN. COVERAGE
- H. JACKET: .003 MIN. WALL LASER MARKABLE WHITE HSTF OVERALL DIAMETER: .138 TYP., .148 MAX.


ELECTRICAL REQUIREMENTS (MEASURED ON 50 FT SAMPLE):

- 1. IMPEDANCE: 110 +6/-4 OHMS MEASURED DIFFERENTIALLY
- 2. CAPACITANCE: 11.0 ± 1.0 pf/ft (BETWEEN PAIRS, GROUND FLOATING)
- 3. TIME DELAY: 1.25 ns/ft NOM.
- 4. ATTENUATION: 9.0 dB/100 ft MAX. @ 100 MHZ
14.2 dB/100 ft MAX. @ 250 MHZ
20.2 dB/100 ft MAX. @ 500 MHZ
29.5 dB/100 ft MAX. @ 1 GHZ
- 5. DIELECTRIC WITHSTANDING VOLTAGE:
1500 Vrms (CONDUCTOR/CONDUCTOR)
1000 Vrms (CONDUCTOR/SHIELD)
- 6. SKEW: 200 ps/50 ft MAX. WITHIN PAIR

OTHER REQUIREMENTS:

- 1. WEIGHT: 22.2 lbs./ 1000 ft. MAX.
- 2. TEMPERATURE: -55 TO +200 C°
- 3. MARKING: MANUFACTURER'S PART NUMBER AND CAGE CODE PER NEMA-WC27500
- 4. FUNCTIONAL CHARACTERISTICS: MEETS OR EXCEEDS NEMA-WC27500 SECTION 3.8

REVISIONS			
REV	DESCRIPTION	DATE	CHG'D BY
A	PRODUCTION RELEASE	30 MAR 2006	-
B	Impedance & Capacitance Change	05 MAY 2006	EL

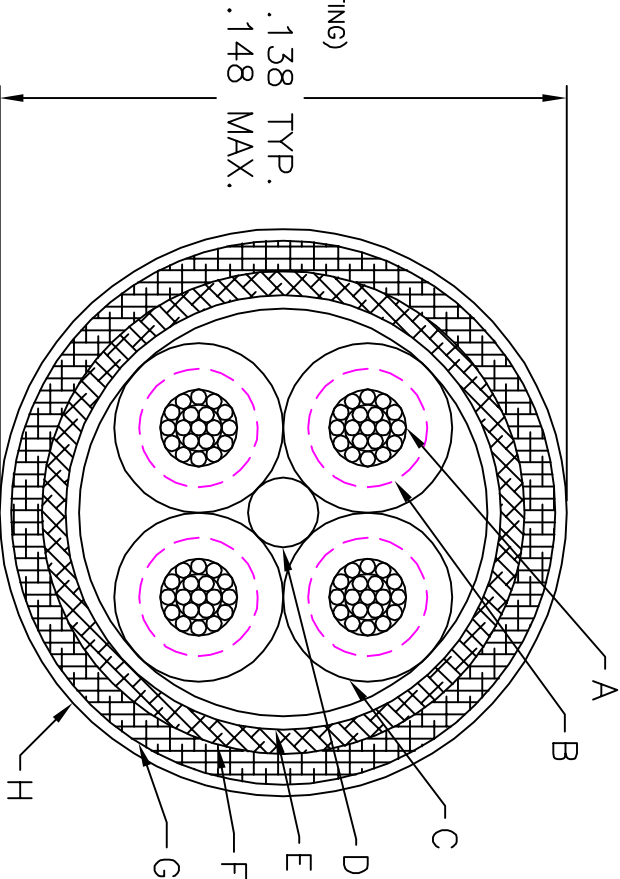

ALL NOMINAL DIMENSIONS HAVE A TOLERANCE OF ±10%	
DIMENSIONS ARE IN INCHES	UNLESS OTHERWISE SPECIFIED
DO NOT SCALE DRAWING	X ± n/a
DEBURR SHARP EDGES	.XX ± n/a
	.XXX ± n/a
	.XXXX ± n/a
	FRACTIONS ± n/a
	ANGLES ± n/a
Third Angle Projection	SURFACE TEXTURE n/a
INTERPRET DRAWING IN ACCORDANCE WITH ASME Y14.5M-1994 (R19199)	BREAKS AND FILETS n/a MAX

GORE

W. L. GORE & ASSOCIATES, INC. (Gore)
 Electronic Products Division
 NEWARK, DELAWARE 19711 302/738-4880
 © 2006 W. L. Gore & Associates, Inc.

By acceptance of this document, you agree that all rights to drawings, specifications, processes and other data contained herein, as well as the proprietary and novel features of the subject matter, are reserved by Gore and are disclosed in confidence. They are not to be used or disclosed, unless and until expressly authorized by Gore. These drawings, specifications, processes, etc., are and remain the property of Gore and are not to be copied or reproduced without express permission, and are to be returned upon request thereof.

Title: 110 OHM QUAD CABLE; AWG 26

Dwg Size	Sheet	Scale	Checked By	Drawn By	Rev Level
A	1 of 1	20:1	ECL	ECL	30 MAR 2006
Rev Date	05 MAY 2006		Drawing Number	RCN 8652	